

INFLATOR/DEFLATOR OPERATING INSTRUCTIONS

WARNING: The Inflator/Deflator should not be operated in wet conditions nor should operator be standing in water or be physically wet. Severe electrical shock may result.

110V MODELS, PLUG INTO STANDARD HOUSEHOLD OUTLETS
12V MODELS, PLUG INTO CIGARETTE LIGHTER OUTLETS*
12V MODELS WITH BATTERY CLIPS, SEE BELOW*

12V Models with battery clips connect RED Alligator clip to POSITIVE (+) terminal of a fully charged 12VDC battery. Connect BLACK alligator clip to NEGATIVE (-) terminal.

*NOTE: If an automotive battery is used for power source, it is recommended that the automobile engine be running at idle while using the Inflator/Deflator.

1. An adaptor is provided for use on inflatables with small valves. Maximum airflow is obtained by placing finger over small hole in adaptor. IMPORTANT: It is recommended that the small hole in adaptor be uncovered periodically to allow motor to cool.
2. Pressing the Inflator/Deflator switch once, turns unit on; pressing switch again, turns unit OFF.
4. The Deflator will remove all air from each chamber, thus, reducing the boat to its smallest dimensions for ease of storage.

