

METRO MAGIC AIR DELUXE INFLATOR/ DEFLATOR INSTRUCTIONS

MODEL DIDA SERIES

INCLUDES: DELUXE INFLATOR/ DEFLATOR POWER UNIT; 6 FOOT FLEXIBLE HOSE; 1 1/4" TO 3/16" ADAPTOR (SMALL VALVES); 1 1/4" TO 7/8" UNIVERSAL ADAPTOR (FITS LARGE 1" VALVES) LOCKS INTO ONE WAY CHECK VALVES OR RUBBER DIAPHRAM VALVES

OPERATION:

1. PLUG GROUNDED POWER SUPPLY CORD INTO GROUNDED OUTLET OR GROUNDED EXTENSION CORD.
2. PLACE HOSE ON EXHAUST END OF POWER UNIT
3. AFFIX ADAPTOR TIGHTLY ON END OF HOSE. CHECK FOR TIGHT FIT.
4. INSERT ADAPTOR INTO VALVE. FOR 3/16" PINPOINTER ADAPTOR, BE SURE TO PUSH FAR ENOUGH INTO VALVE SO THAT FLAP IS OPEN FOR MAXIMUM AIRFLOW.
5. FOR LARGE VALVE ADAPTOR, TWIST TO LOCK OR SECURE ADAPTOR IN PLACE
6. TURN SWITCH FROM "OFF" TO "ON" POSITION.
7. INFLATE YOUR INFLATABLE. MONITOR INFLATION SO THAT POWER UNIT DOES NOT OVER INFLATE.

FOR DEFLATION:

1. PLACE HOSE WITH ADAPTOR ON INTAKE END OF POWER UNIT.
2. FIRMLY INSERT ADAPTOR INTO VALVE, OPENING FLAP OR DIAPHRAM.
3. TURN POWER UNIT FROM "OFF" TO "ON" POSITION.
4. DEFLATE YOUR INFLATABLE. MONITORING YOUR INFLATOR WILL ENSURE TOTAL DEFLATION WITHOUT CAUSING DAMAGE OR OVERHEATING.

