

356400

Illustrated Parts List

Model Series

356400

AIR COOLED

TYPE NUMBERS
0001 to 3415.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


 


1036 EMISSIONS LABEL

1330 REPAIR MANUAL




1319 WARNING LABEL

WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.




REQUIRED when replacing parts with warning labels affixed.

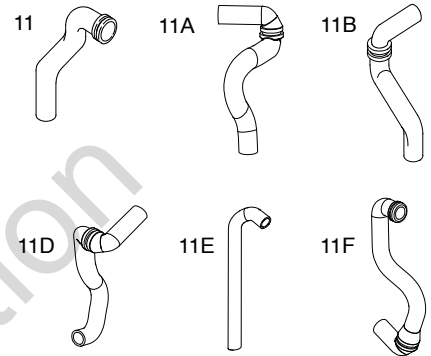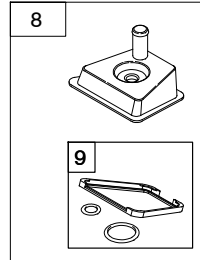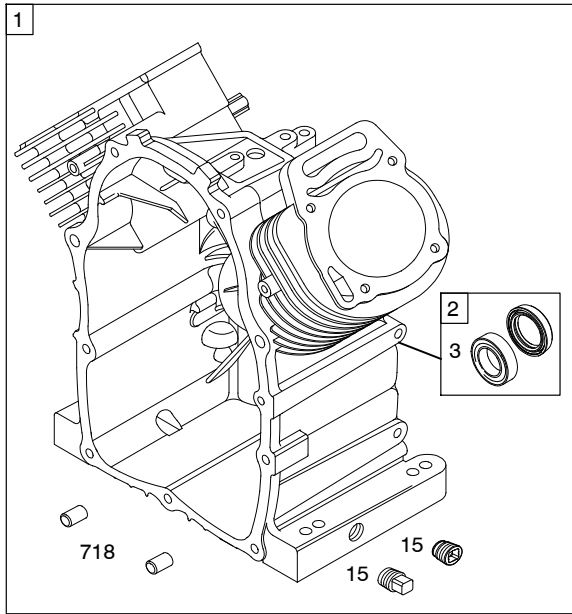



601B ♀

 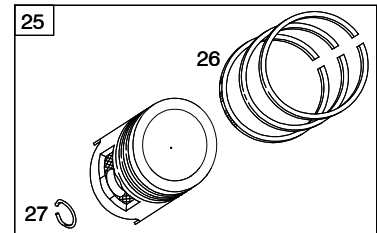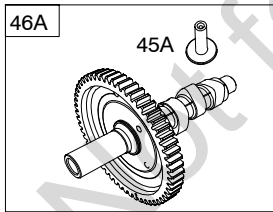














USED AFTER DATE CODE: 07062900






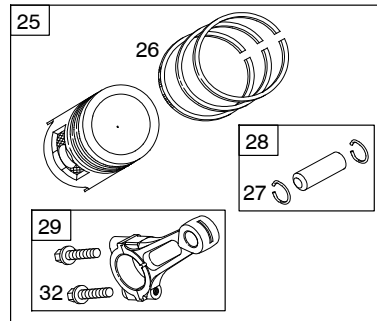
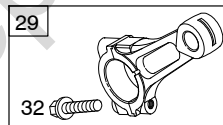
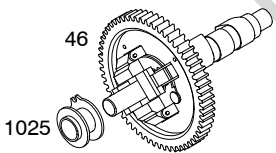


USED BEFORE DATE CODE: 07063000



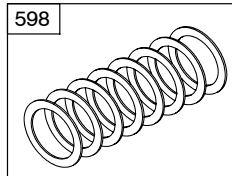
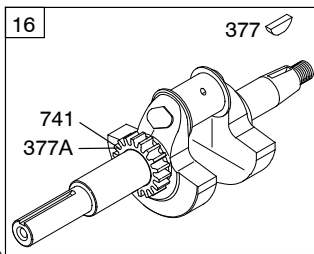


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-2 Assemblies include all parts shown in frames. 01/04/2016

  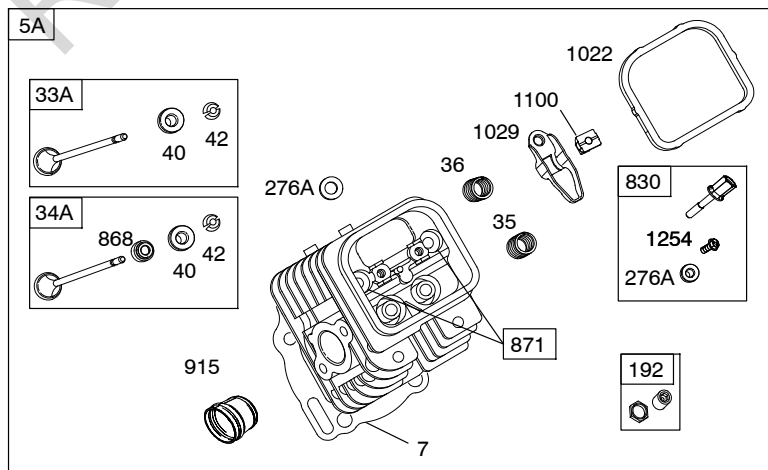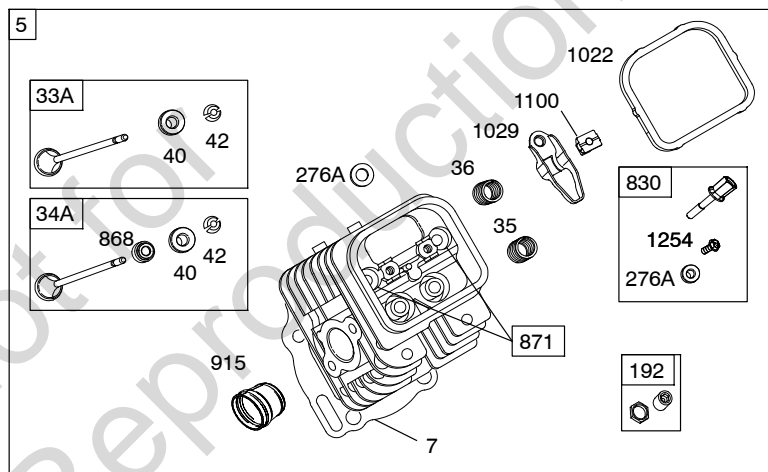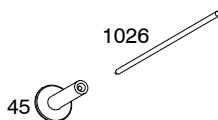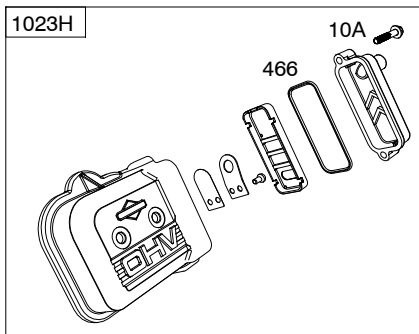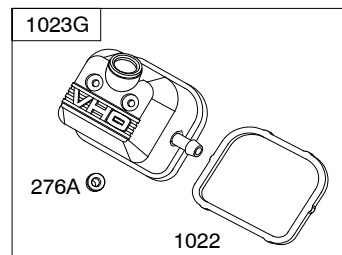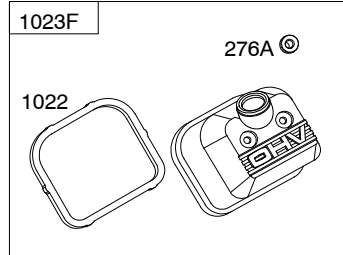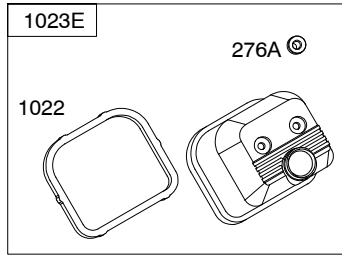 
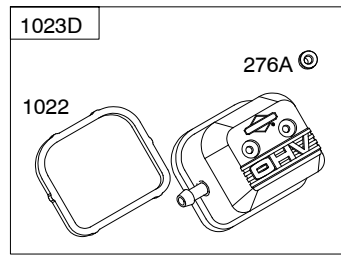
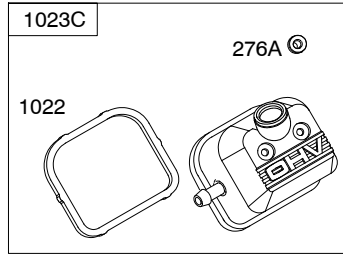
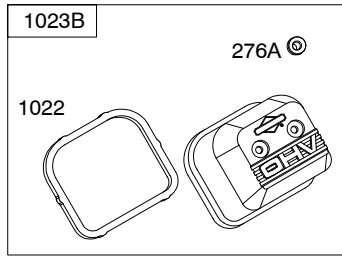


 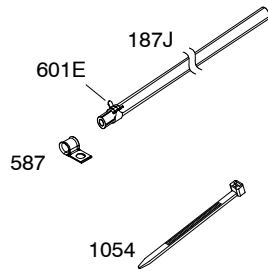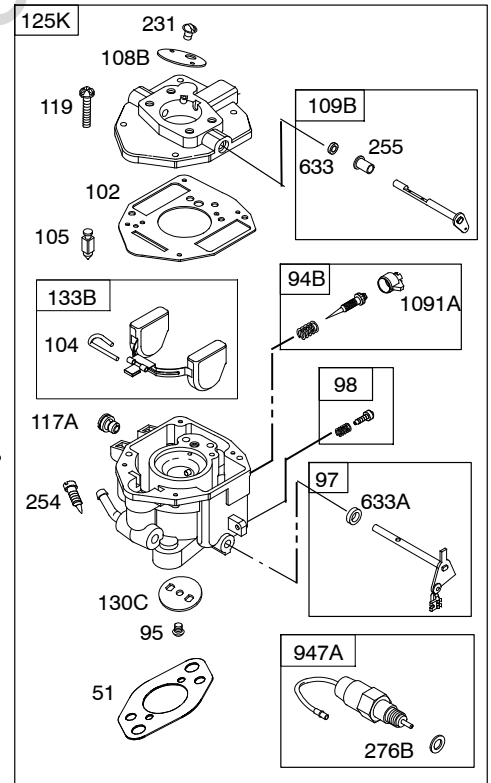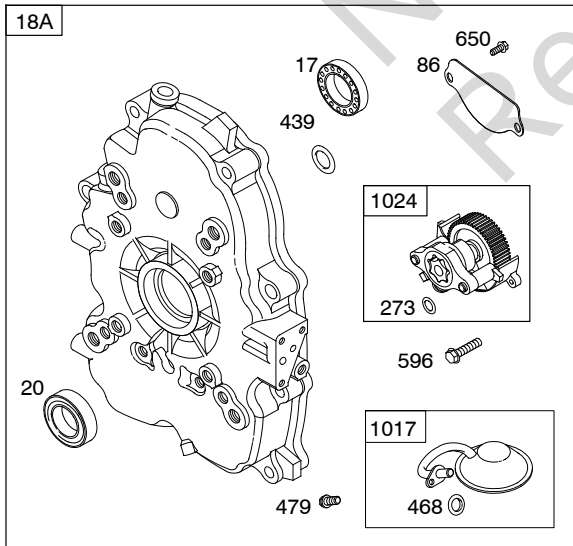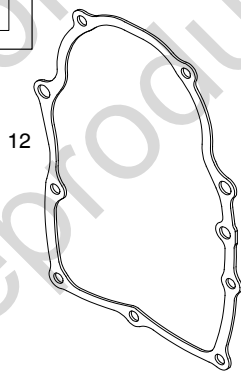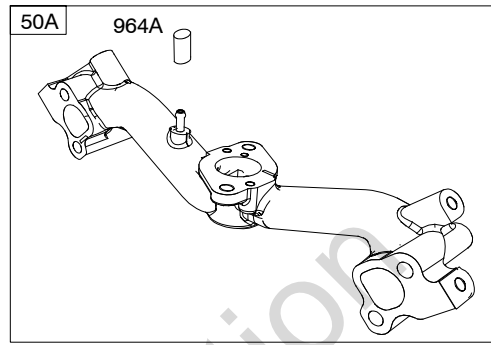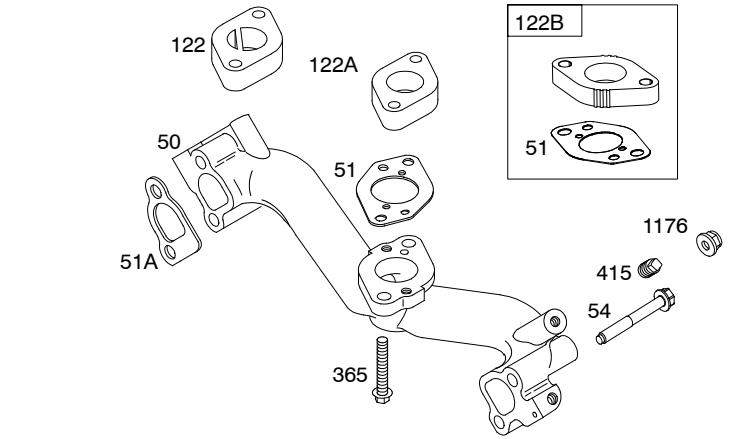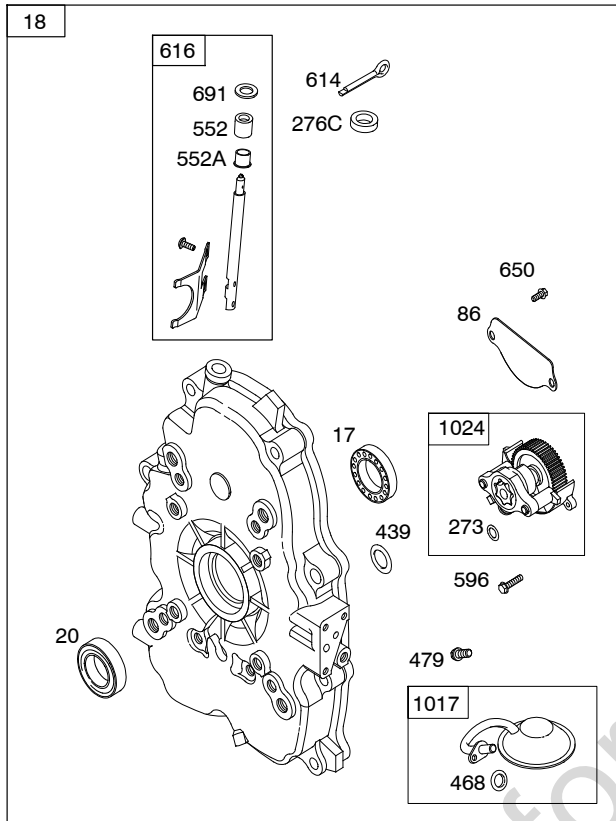


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-4 Assemblies include all parts shown in frames. 01/04/2016

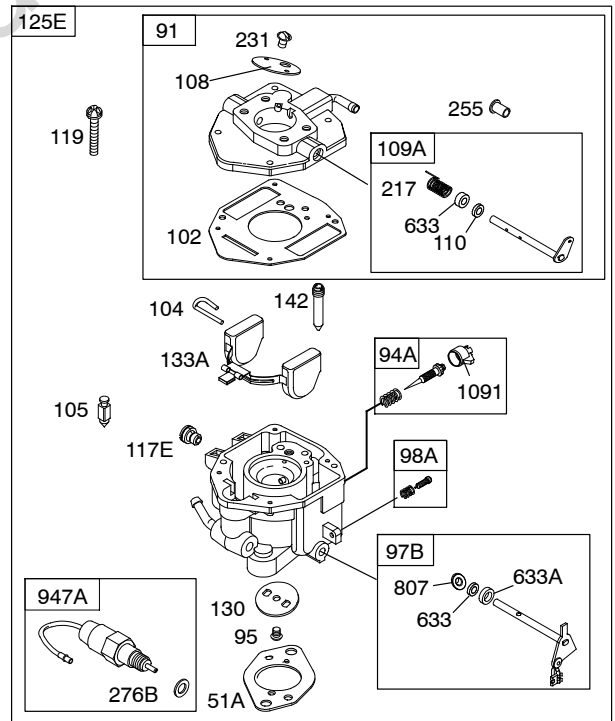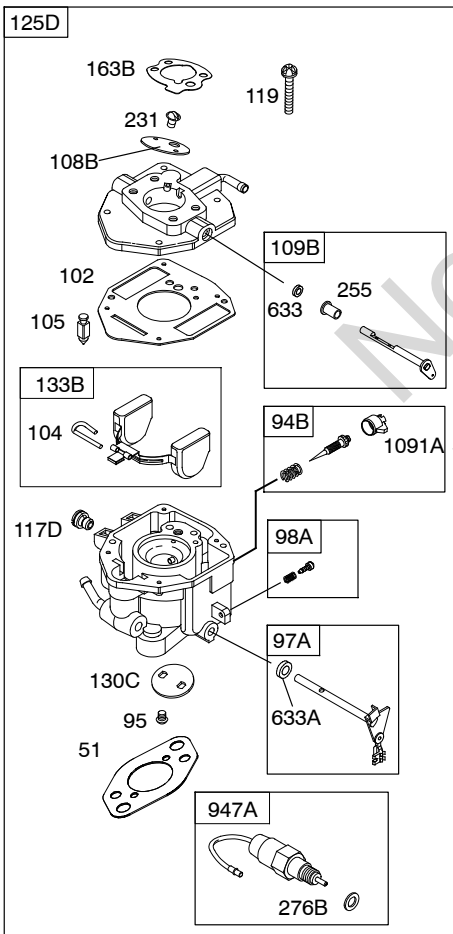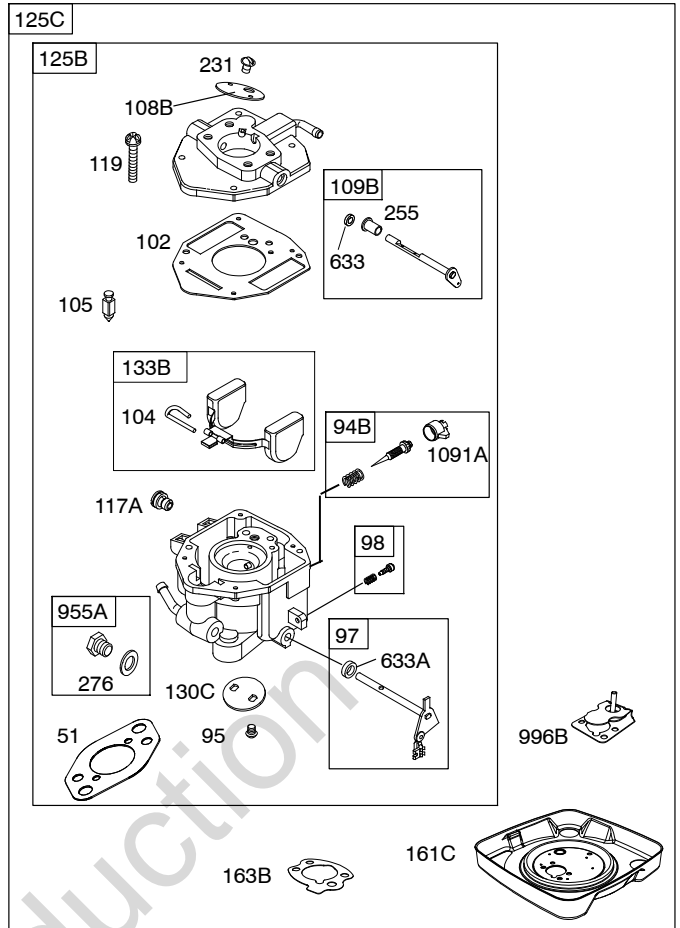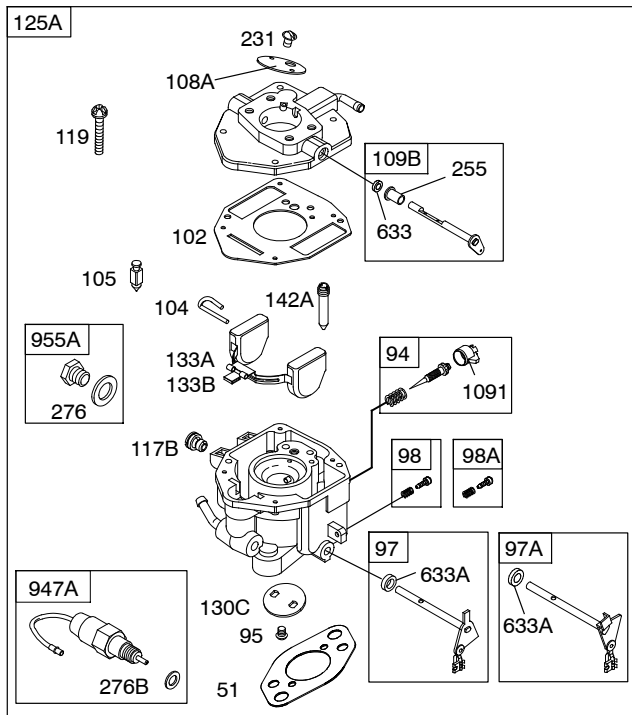










Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-5 Assemblies include all parts shown in frames. 01/04/2016

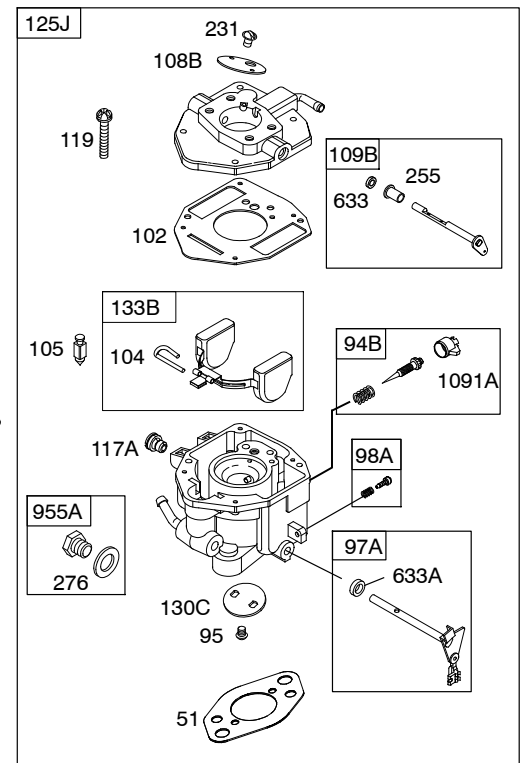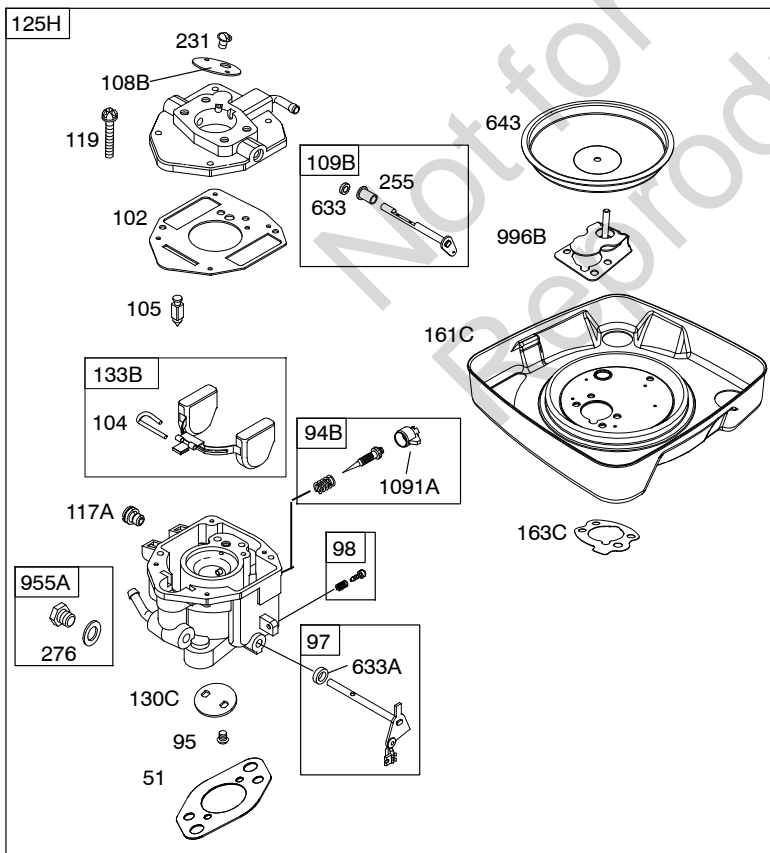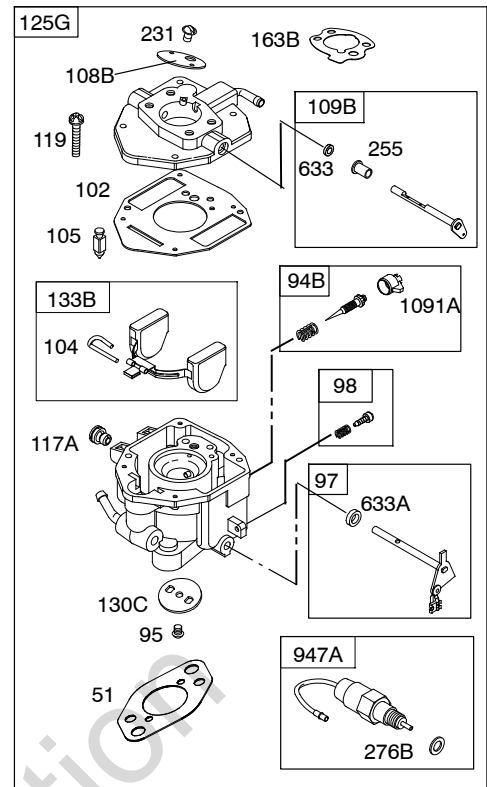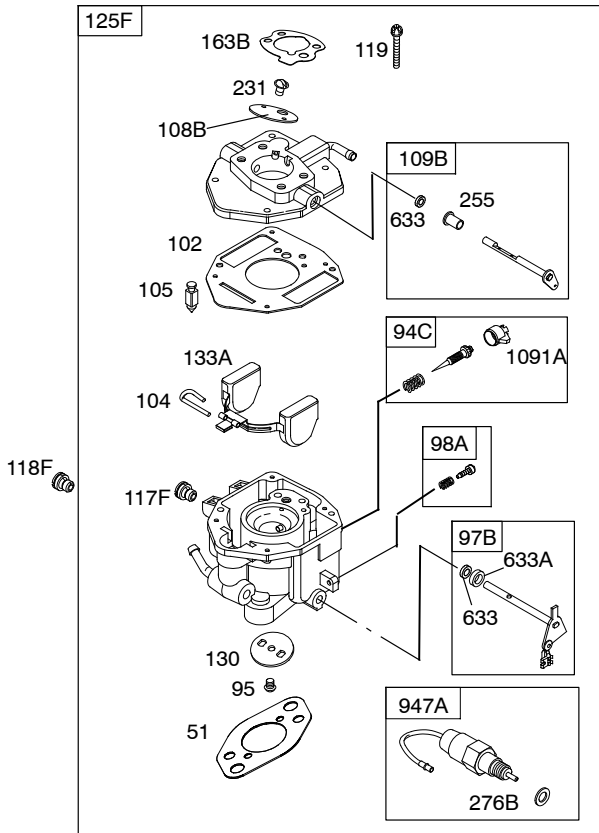


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-6 Assemblies include all parts shown in frames. 01/04/2016










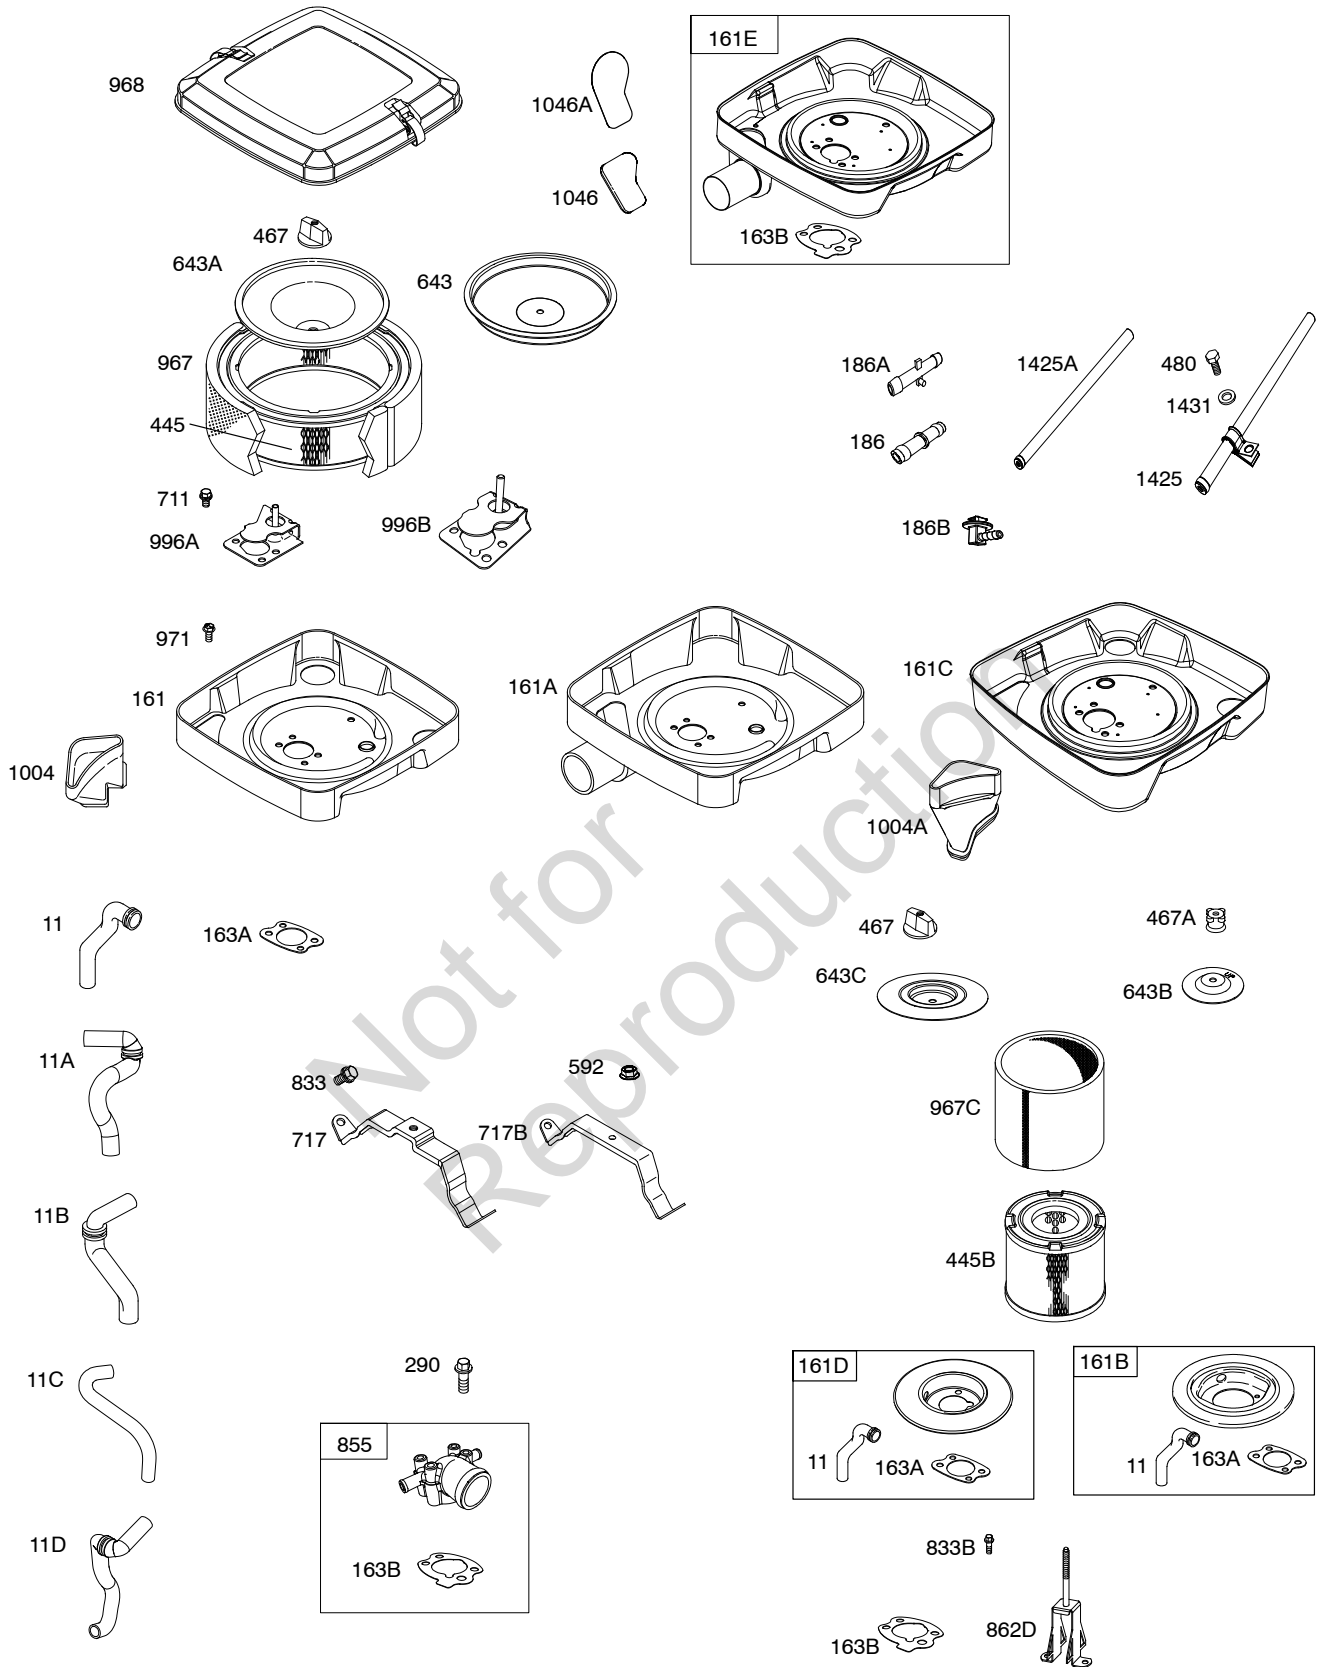


  5761-7 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 01/04/2016

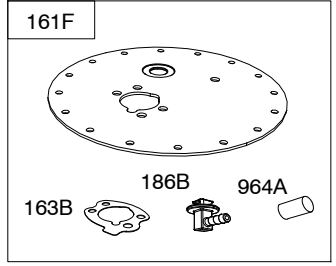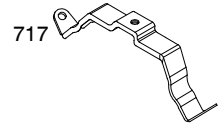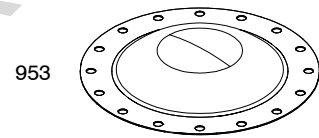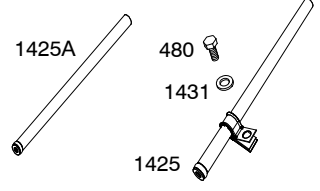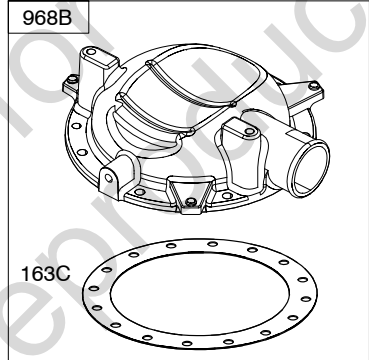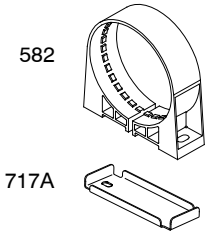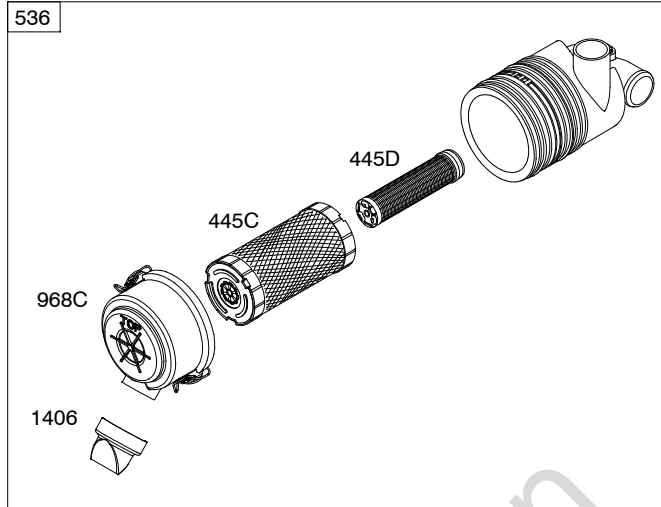


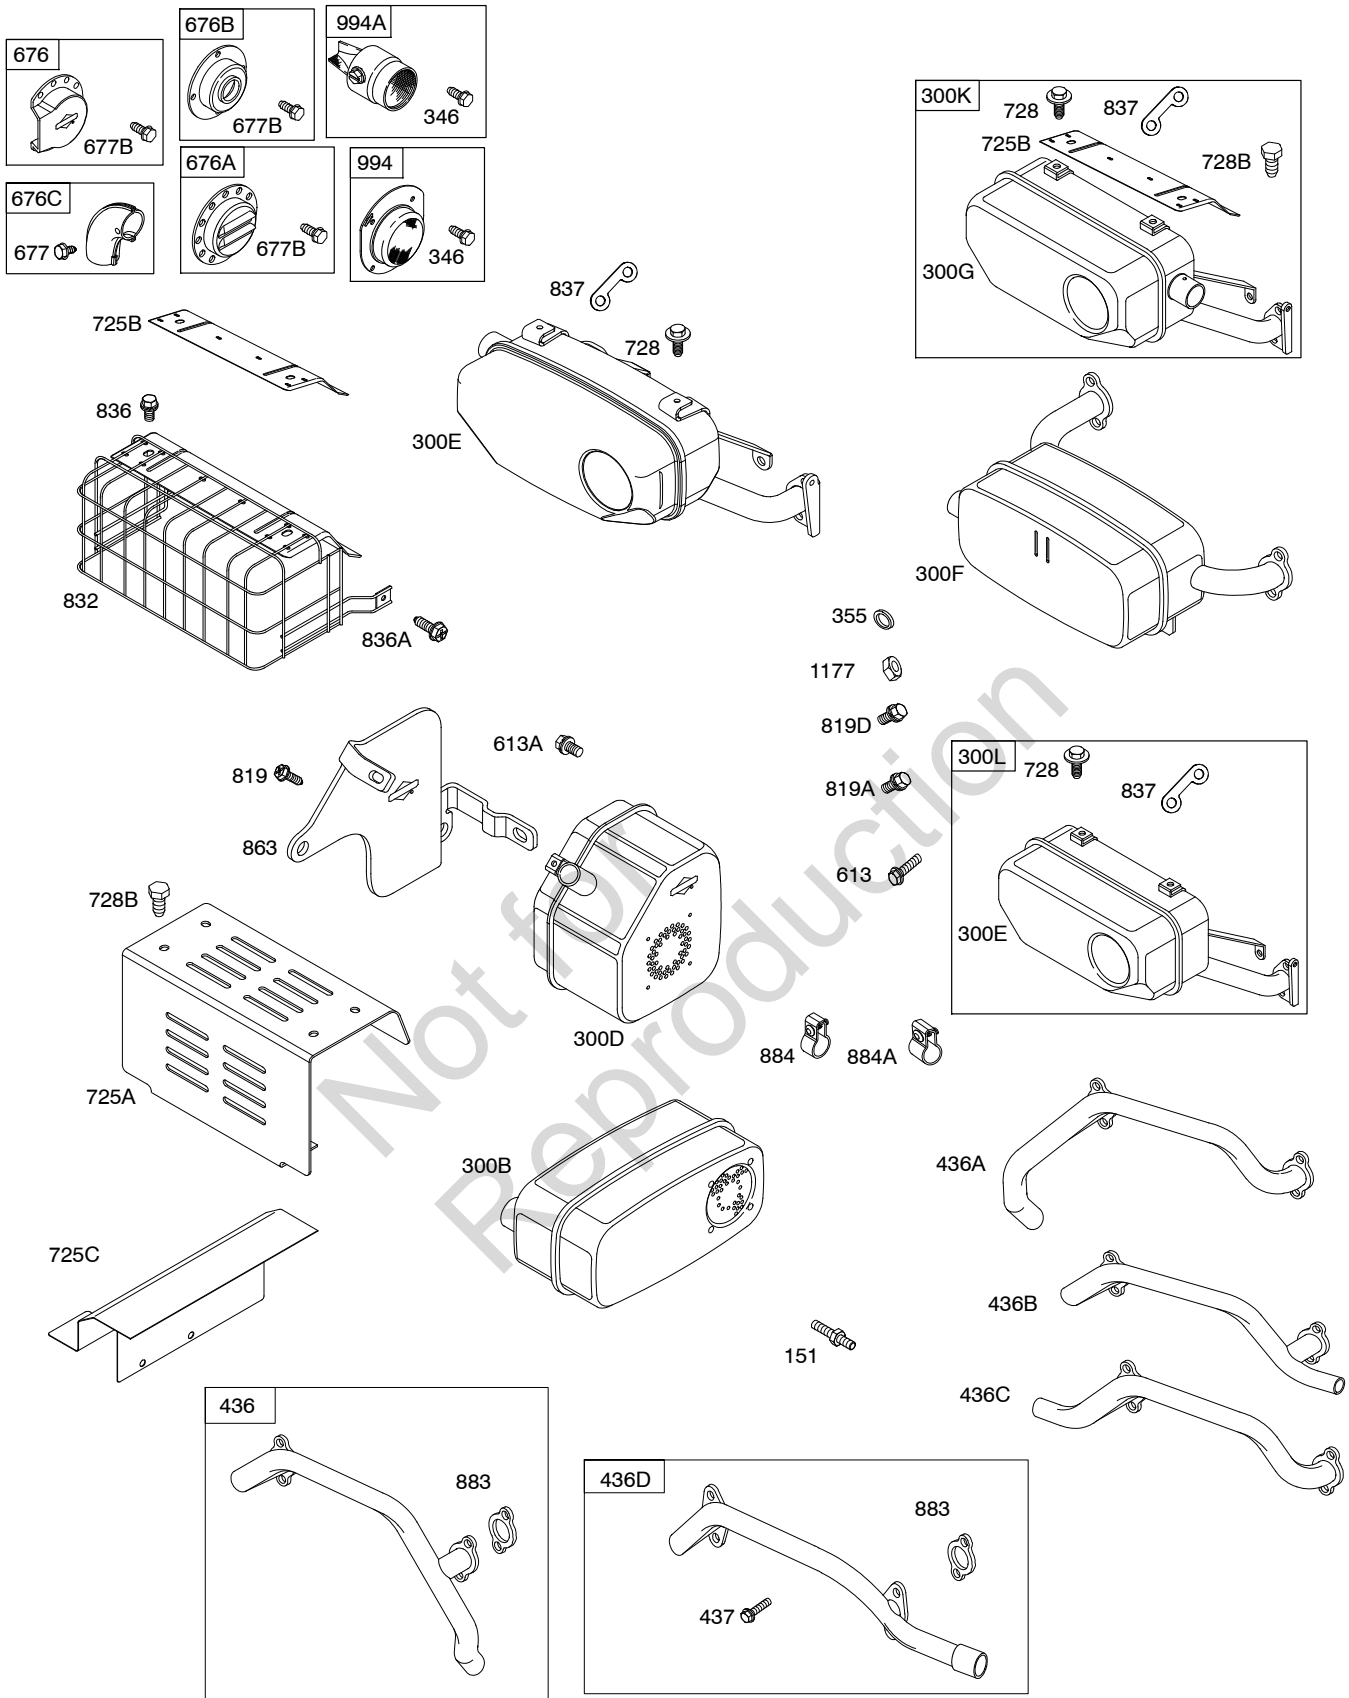


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-9 Assemblies include all parts shown in frames. 01/04/2016

    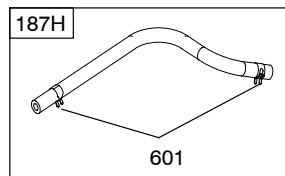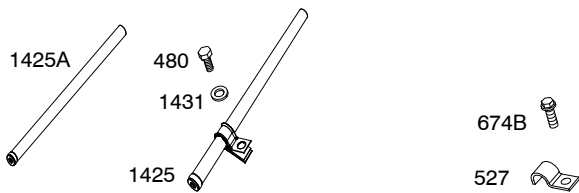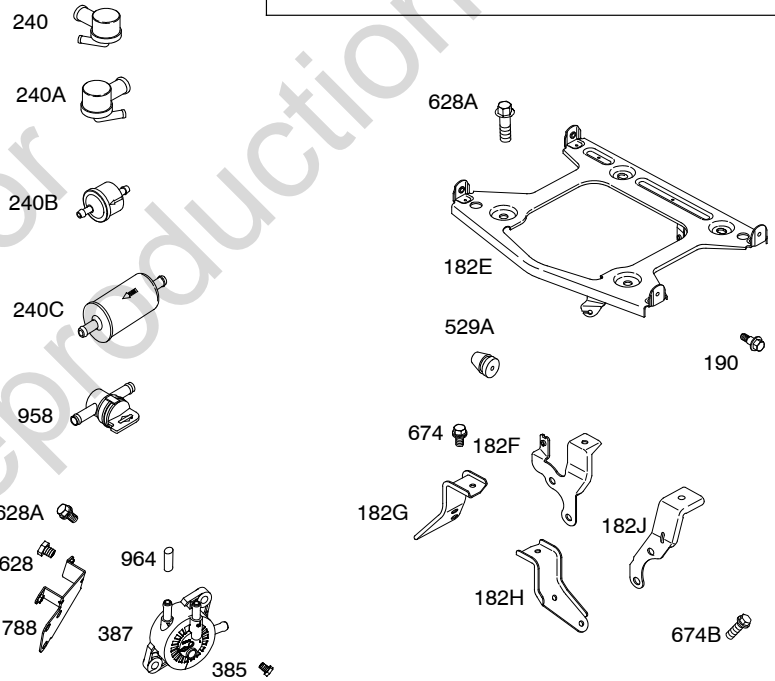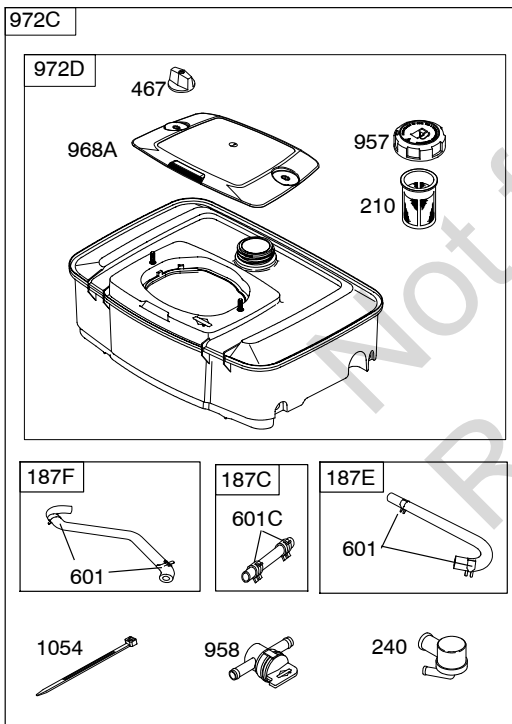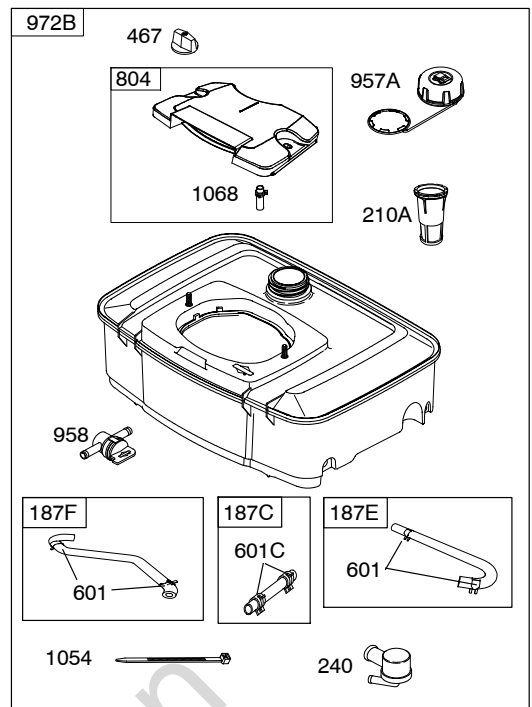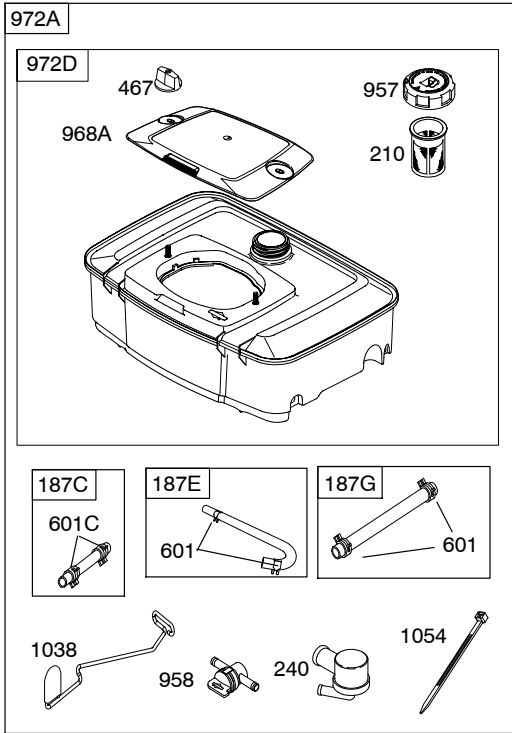

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-10 Assemblies include all parts shown in frames. **01/04/2016**

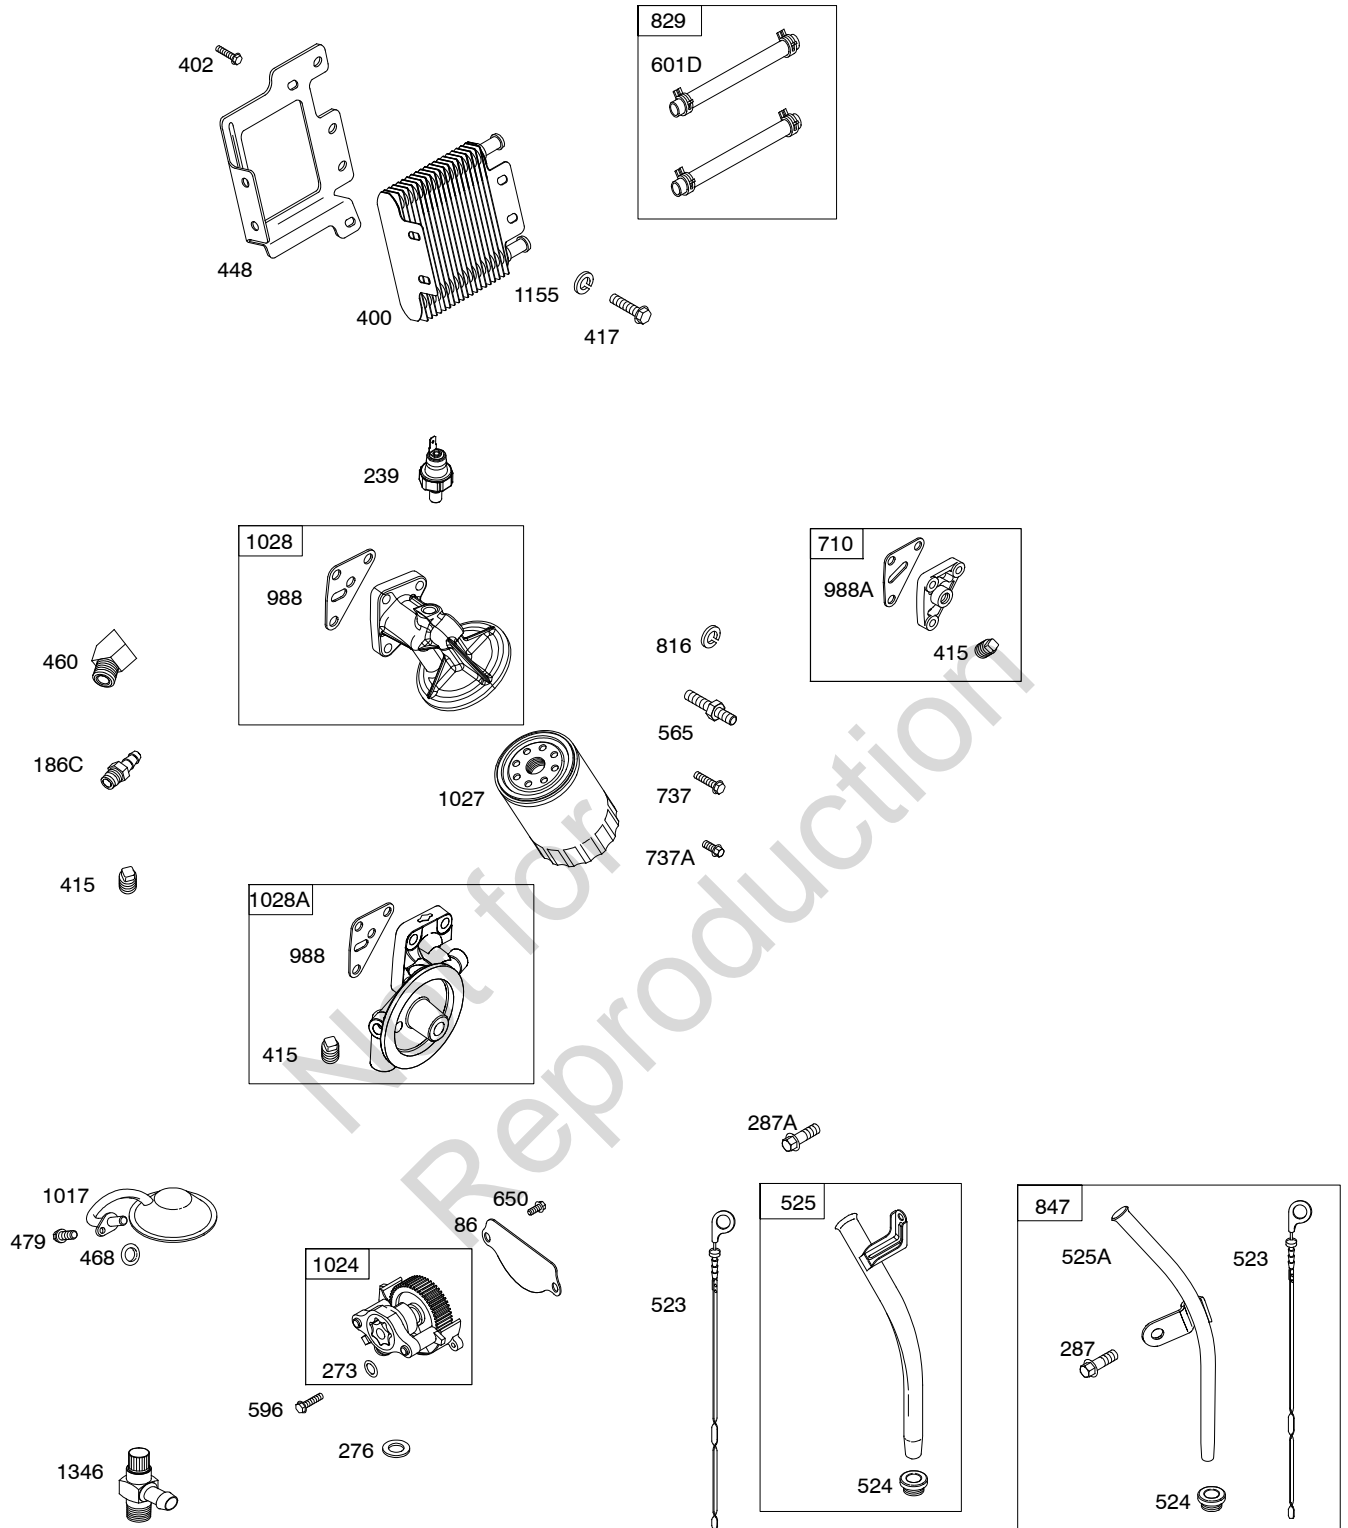


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-11 Assemblies include all parts shown in frames. 01/04/2016

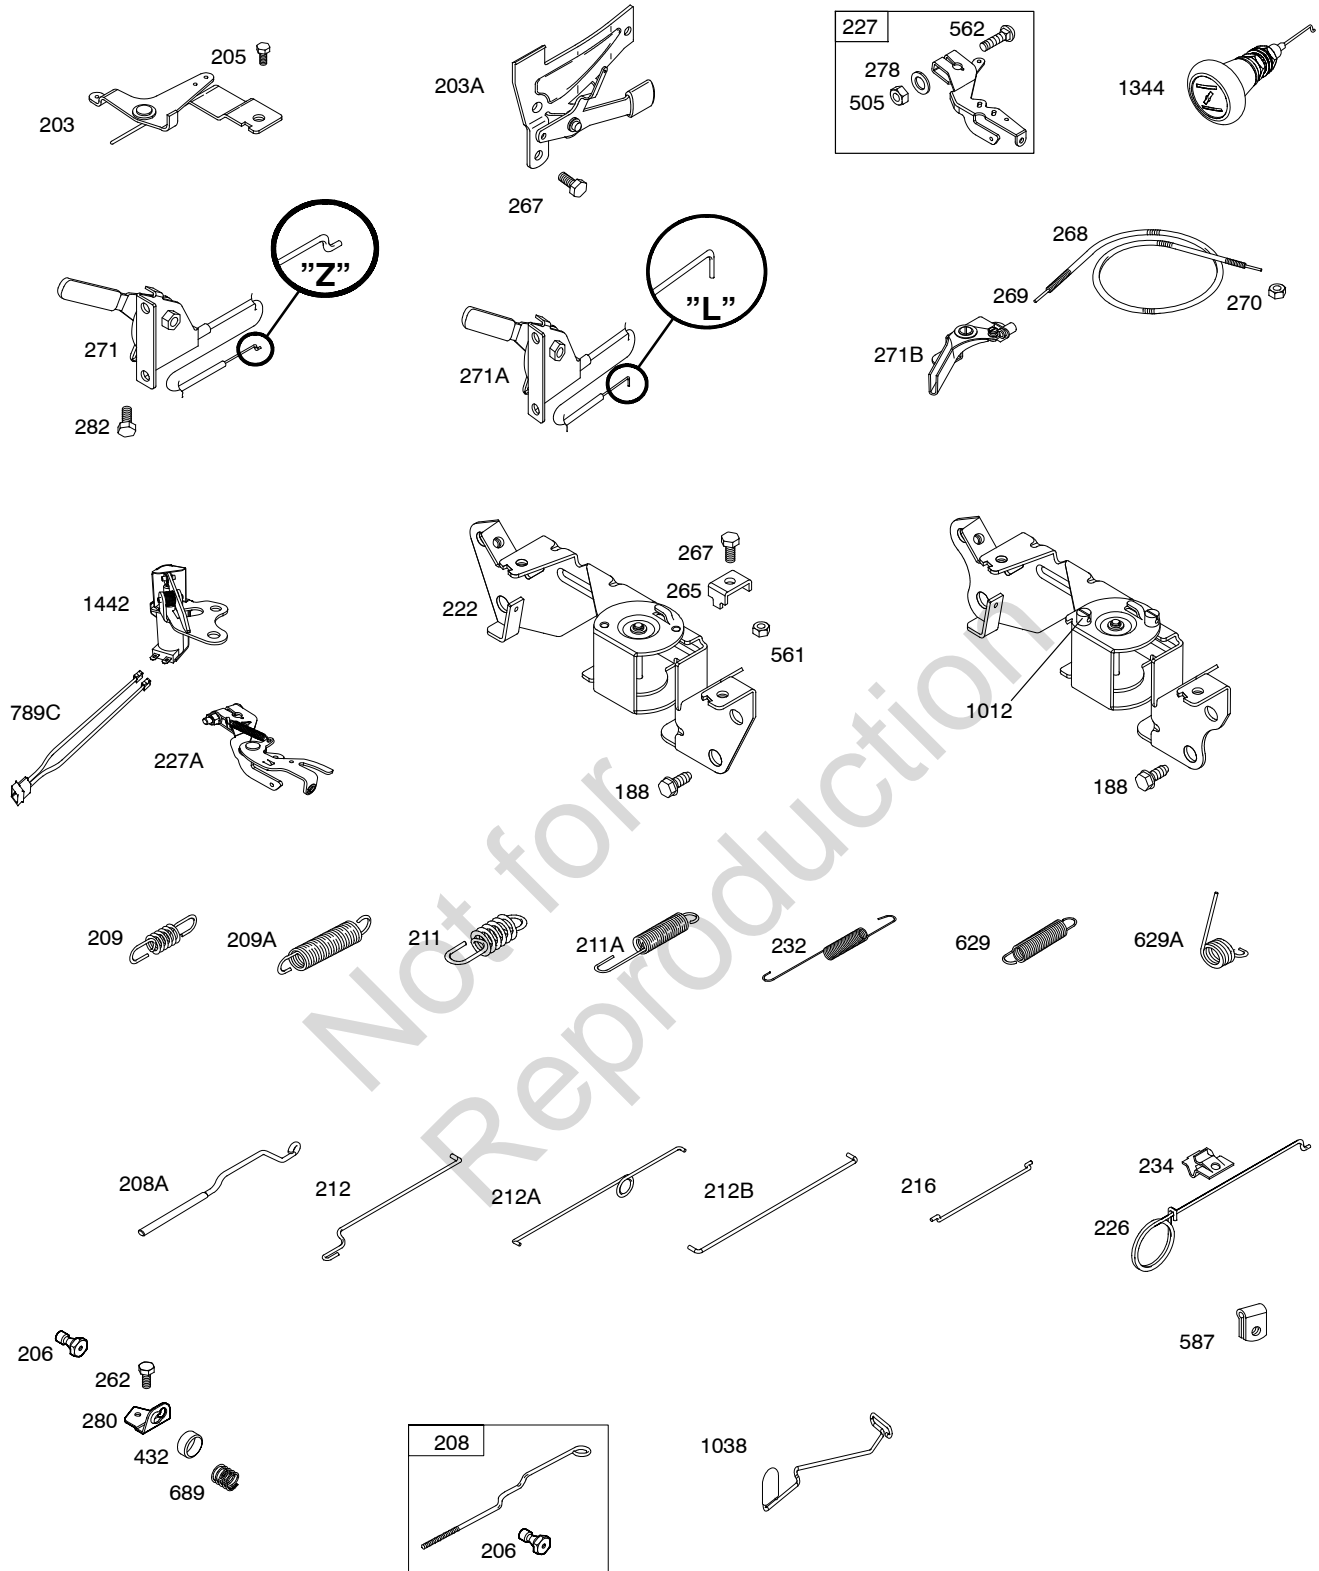


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-12 Assemblies include all parts shown in frames. **01/04/2016**


??AMP	DC -ONLY	5 - 9 AMP	10 - 16 AMP	20 AMP	20 AMP POWER LINK				
474 	474B 	1059 	474C 	1059 	474D 	1059 	474E 	1059 	474F
501D 	526 	1119 	878 	578 	578 	578 	578 	578 	578
893A 	577 	526A 	501A 	526 	501 	526B 	501B 	526B 	501C
920B 	683 								
	899 								
	920 								

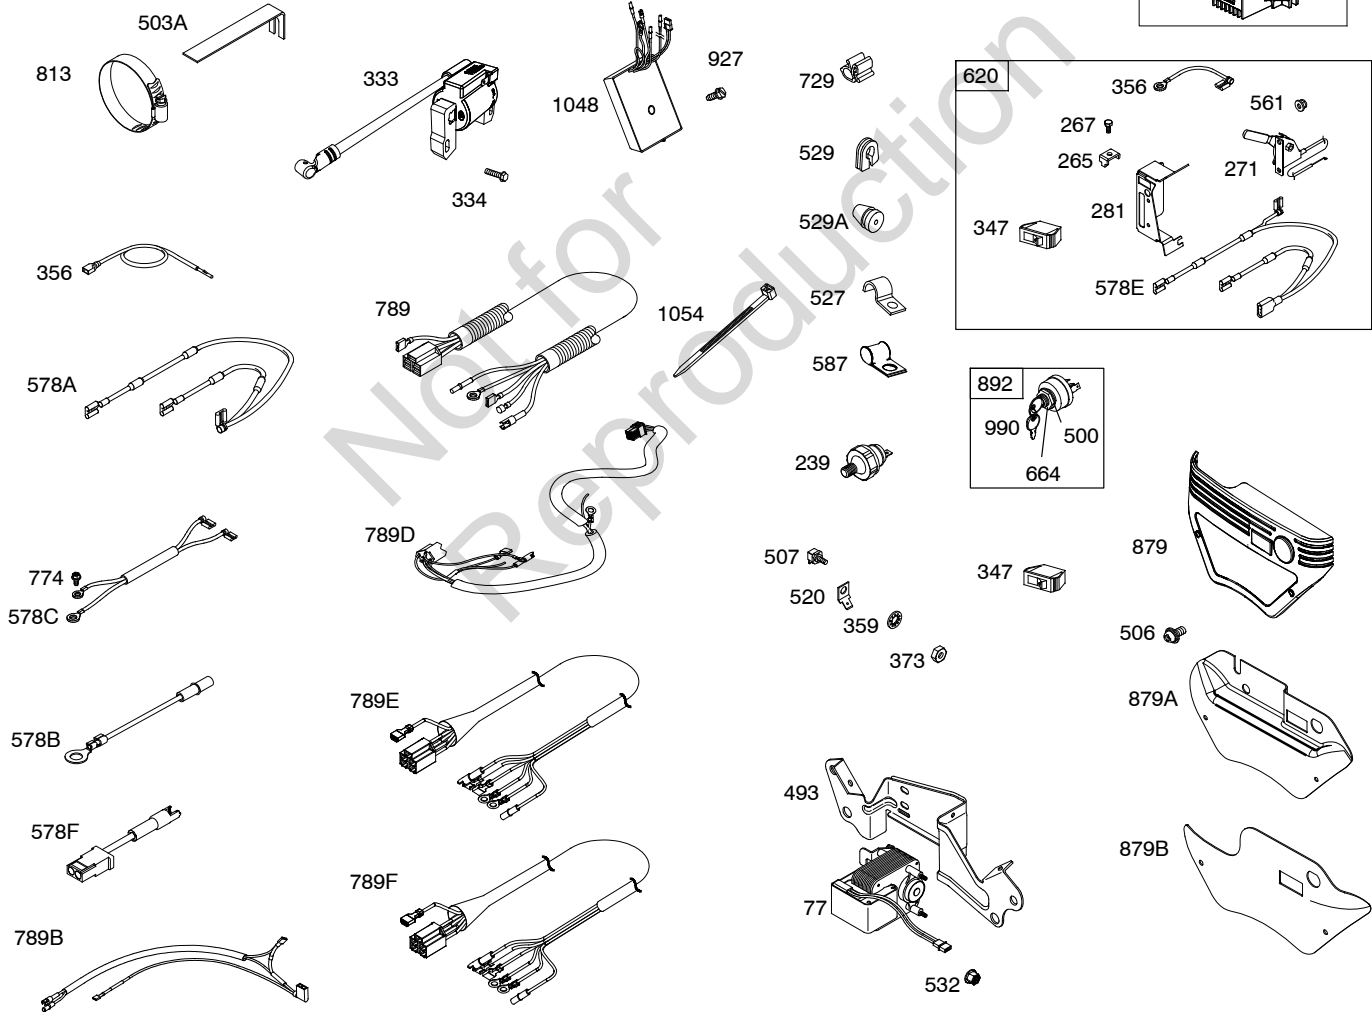











Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-13 Assemblies include all parts shown in frames. 01/04/2016

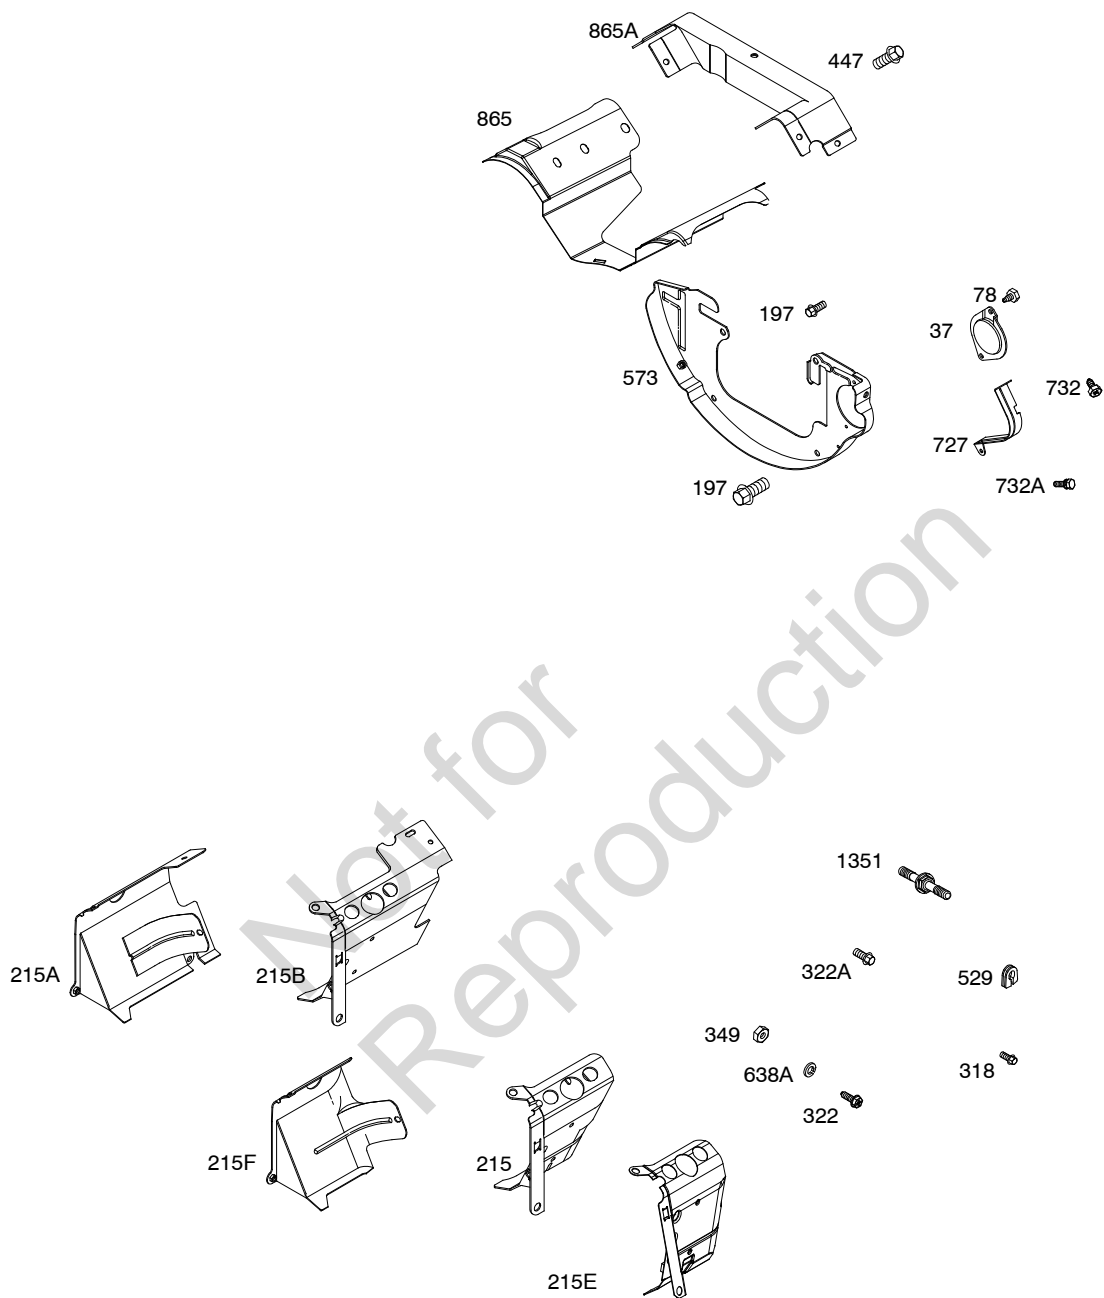


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-14 Assemblies include all parts shown in frames. 01/04/2016

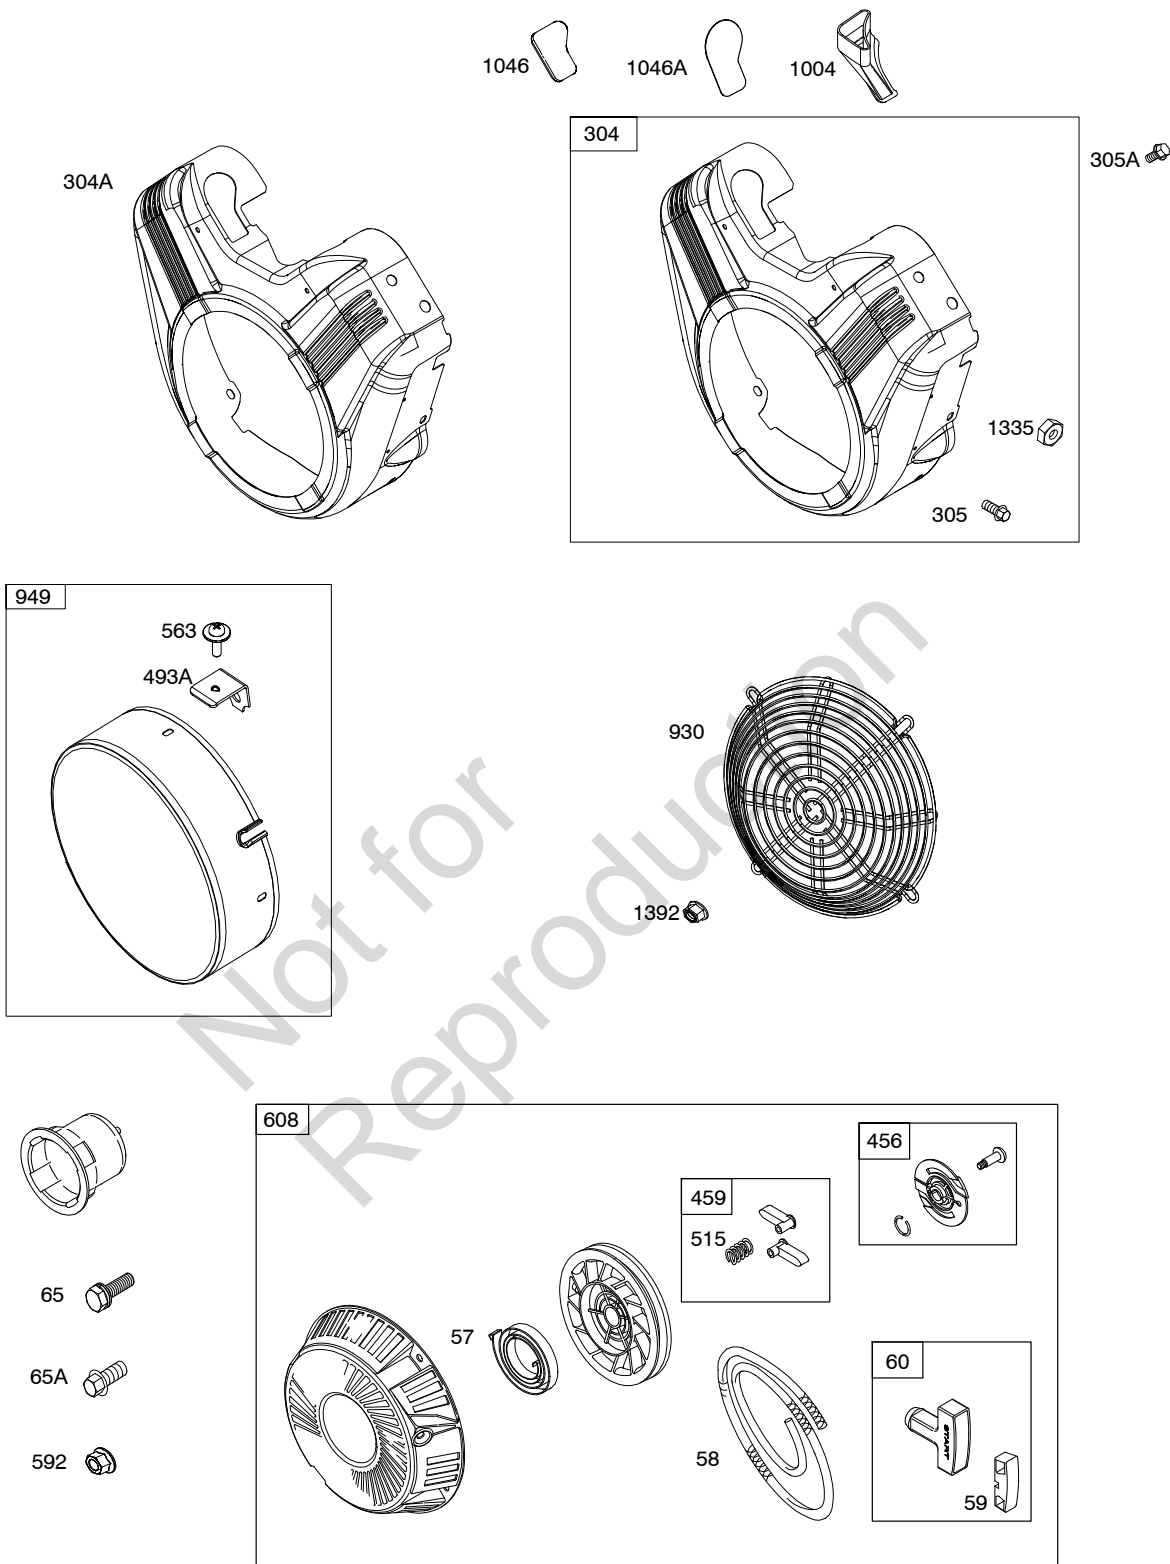


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-15 Assemblies include all parts shown in frames. 01/04/2016

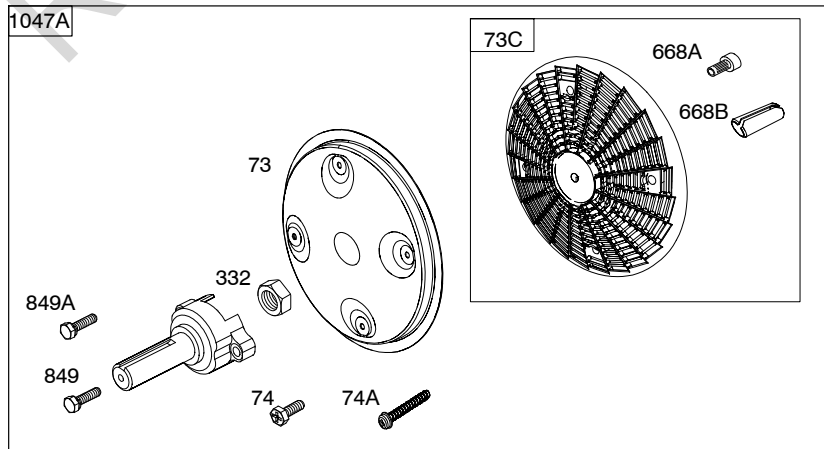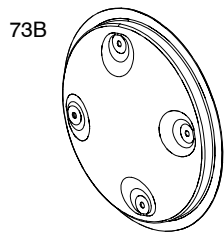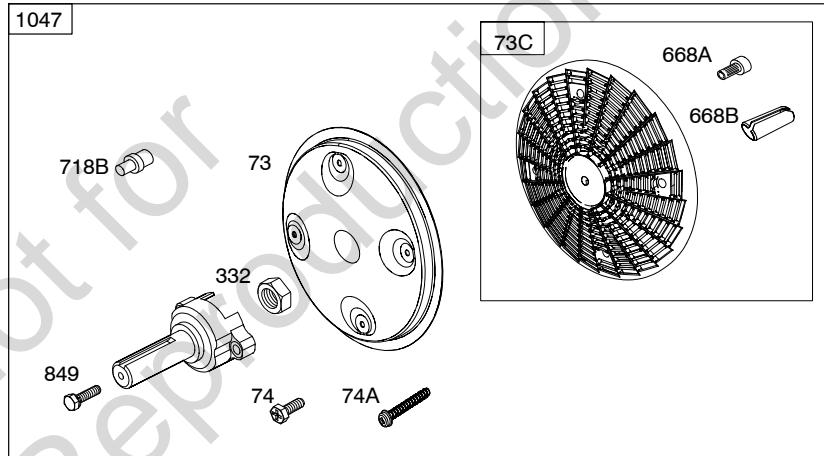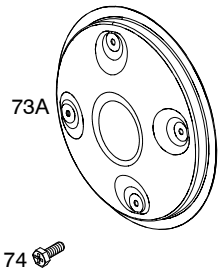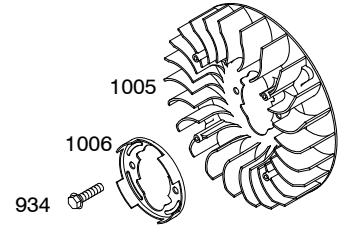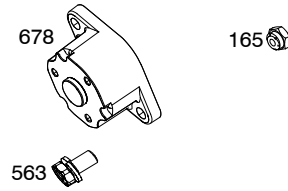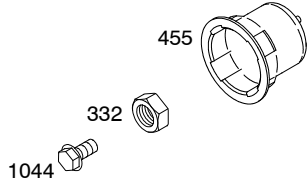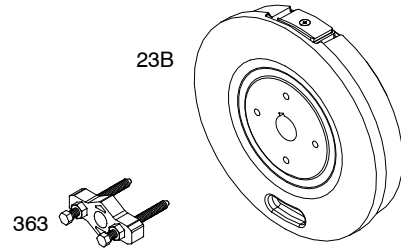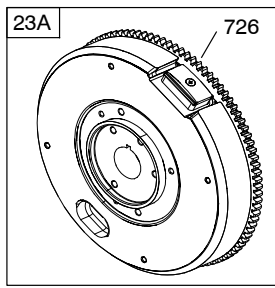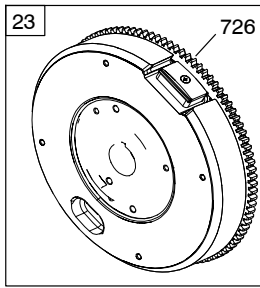


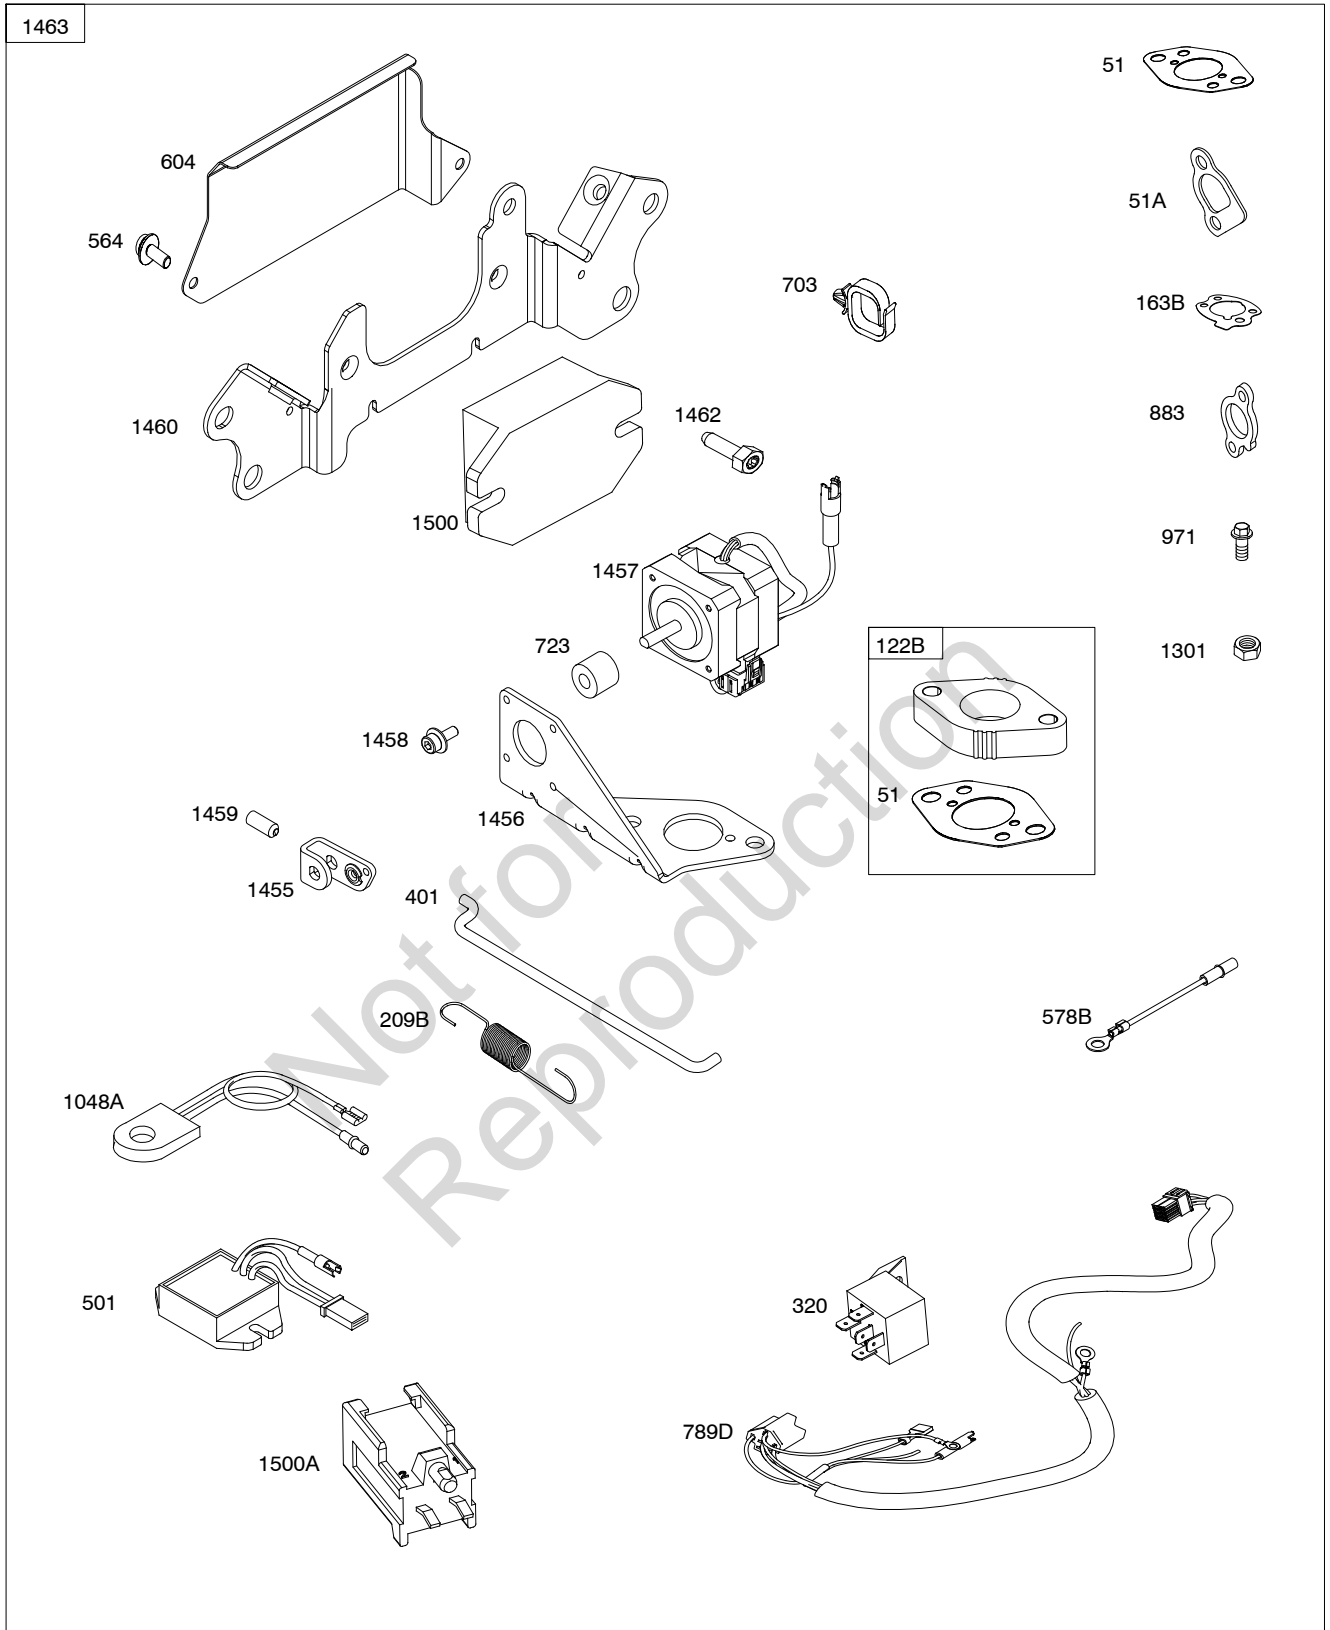



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-17 Assemblies include all parts shown in frames. 01/04/2016

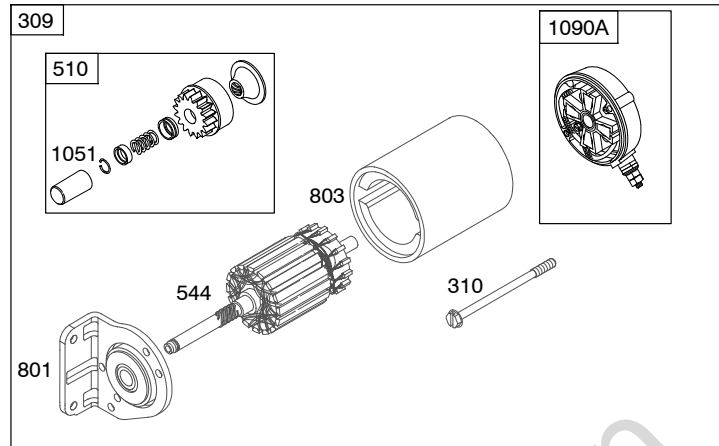





697

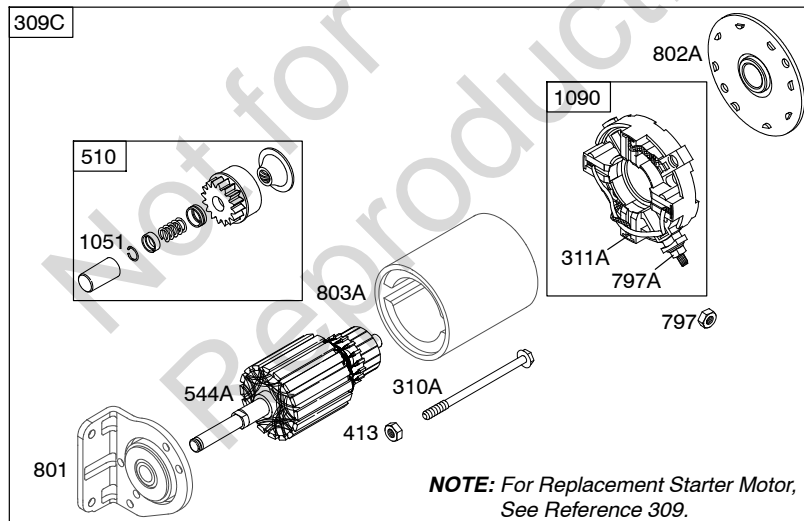

697

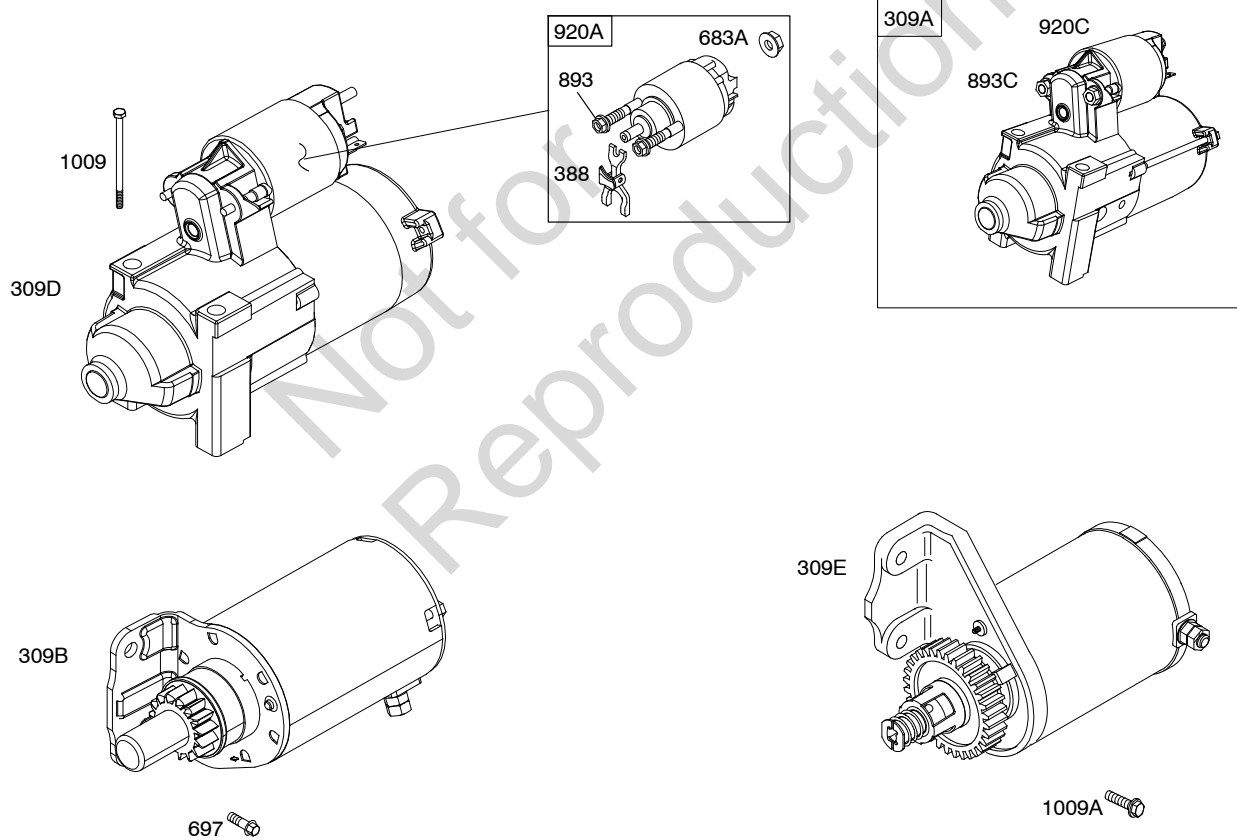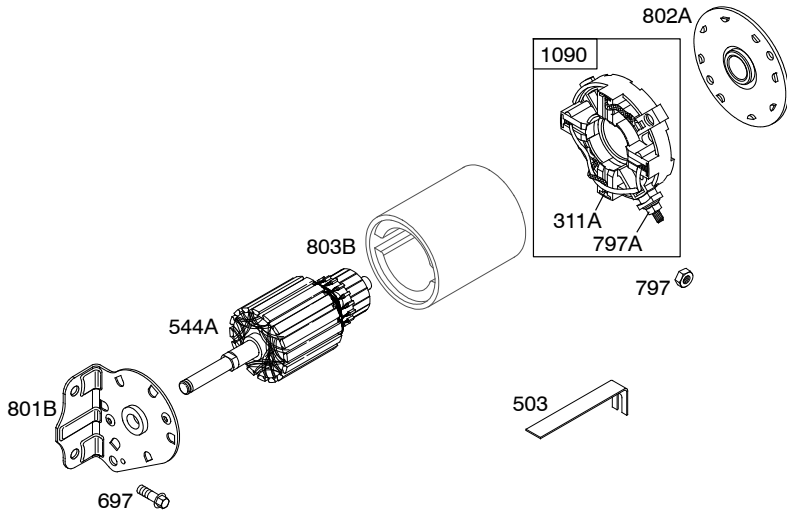

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-19 Assemblies include all parts shown in frames. 01/04/2016

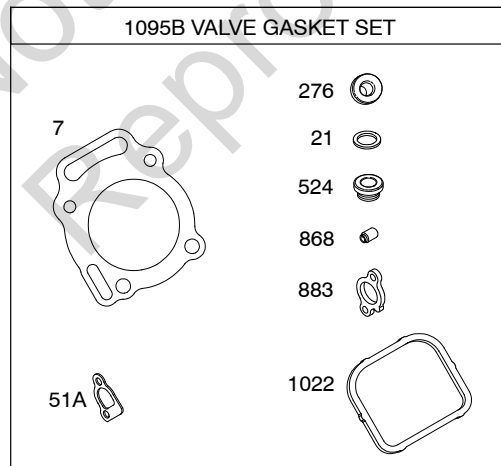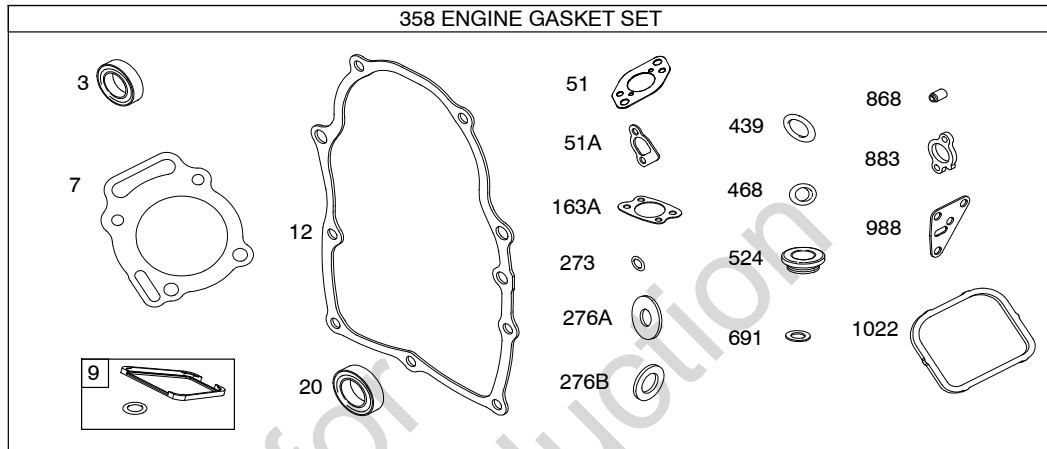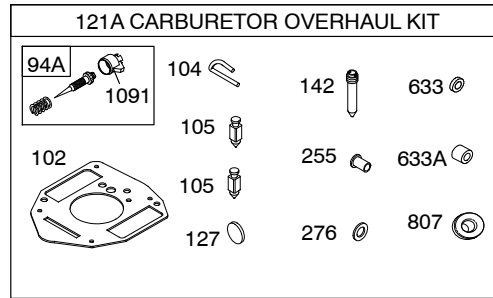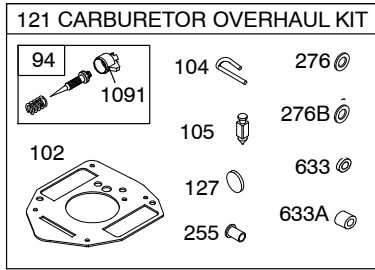

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	692544	Cylinder Assembly ----- Note ----- 841579 Cylinder Assembly Used on Type No(s). 0116, 0166, 0167, 0175, 0315. 841562 Cylinder Assembly Used on Type No(s). 0036, 0130, 0165, 0207, 0292, 0350, 0374, 1165, 1415, 3415. 845746 Cylinder Assembly Used on Type No(s). 0155, 0183, 0324, 0364, 0404, 1155. 808702 Cylinder Assembly Used on Type No(s). 0010.	11D	844976	Tube-Breather (Used After Code Date 10010100) Used on Type No(s). 0236, 0275, 0338, 0364, 1338, 3038.				809811 Crankshaft (Used Before Code Date 07063000). Used on Type No(s). 0005, 0078, 0121, 0122, 0126, 0128, 0141, 0149, 0150, 0152, 0173, 0194, 0202, 0208, 0219, 0228, 0332. 843802 Crankshaft (Used After Code Date 07062900). Used on Type No(s). 0011, 0087, 0133, 0226, 0229, 0235, 0270, 0279, 0363, 0369, 0403, 0610, 1226, 1279, 2133, 3087.
			11E	844445	Tube-Breather (Used Before Code Date 10010100) Used on Type No(s). 0236, 0240, 0275, 0338. ----- Note ----- 844445 Tube-Breather Used on Type No(s). 0240, 0404.				
			11F	846103	Tube-Breather Used on Type No(s). 0010.				
			12	845254	Gasket-Crankcase				809833 Crankshaft (Used Before Code Date 07063000). Used on Type No(s). 0087, 0133, 0226, 0229, 0235.
			13	692059	Screw (Cylinder Head)				
			15	690946	Plug-Oil Drain (3/8-18 NPTF External 7/16" Sq) ----- Note ----- 691680 Plug-Oil, Drain (3/8-18 NPTF Internal 3/8" Sq)				843800 Crankshaft Used on Type No(s). 0028, 0210, 0237, 0282, 0311, 0312, 0355, 0387.
2	808534	Kit-Bushing/Seal (Magneto Side)	16	843794	Crankshaft ----- Note ----- 809806 Crankshaft (Used Before Code Date 07063000). 843797 Crankshaft (Used After Code Date 07062900). Used on Type No(s). 0004, 0005, 0006, 0013, 0031, 0032, 0067, 0078, 0097, 0121, 0122, 0126, 0128, 0141, 0149, 0150, 0152, 0173, 0194, 0202, 0208, 0214, 0219, 0228, 0252, 0253, 0261, 0300, 0319, 0320, 0332, 0356, 0371, 0372, 0378, 0395, 0397, 3005, 3078.				843803 Crankshaft (Used After Code Date 07062900). Used on Type No(s). 0179, 0286, 0304. 809837 Crankshaft (Used Before Code Date 07063000). Used on Type No(s). 0179. 843795 Crankshaft Used on Type No(s). 0077, 0171, 0189, 0191, 0381, 0601, 0604, 0607, 1189, 3077.
3	805101s	Seal-Oil (Magneto Side)							
5	809185	Head-Cylinder (Cylinder 1)							
5A	809186	Head-Cylinder (Cylinder 2)							
7	845884	Gasket-Cylinder Head (Graphoil)							
8	808984	Breather Assembly							
9	844986	Gasket-Breather							
10	690751	Screw (Breather Assembly)							
10A	806421	Screw (Breather Cover)							
11	691556	Tube-Breather							
11A	844921	Tube-Breather (Used After Code Date 09122200)							
11B	806083s	Tube-Breather (Used Before Code Date 09122300)							
11C	845585	Tube-Breather Used on Type No(s). 0304.							

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-21 Assemblies include all parts shown in frames. 01/04/2016

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		843990 Crankshaft Used on Type No(s). 0147, 0405.			808508 Cover- Crankcase (Used Before Code Date 07101500). Used on Type No(s). 0005, 0115, 0116, 0149, 0150, 0174, 0175.	23A	809174	Flywheel Used on Type No(s). 0116, 0166, 0167, 0175.
		843799 Crankshaft (Used After Code Date 07062900). Used on Type No(s). 0203.						----- Note ----- 841050 Flywheel Used on Type No(s). 0008, 0009, 0019, 0023, 0026, 0034, 0040, 0069, 0115, 0135, 0142, 0174, 0178, 0195, 0200, 0209, 0217, 0234, 0239, 0259, 0262, 0264, 0266, 0270, 0271, 0277, 0280, 0281, 0283, 0307, 0308, 0309, 0314, 0318, 0339, 0348, 0353, 0355, 0360, 0361, 0368, 0377, 0383, 0389, 0402, 0609, 1217, 1239, 1266, 1270, 1277, 1283, 1308, 1339, 2277, 2308, 2309.
		809822 Crankshaft (Used Before Code Date 07063000). Used on Type No(s). 0203.	20	805049s	Seal-Oil (PTO Side)			
		17 843827 Bearing-Ball	21	809500	Cap-Oil Fill			
		18 844588 Cover-Crankcase	22	807362	Screw (Crankcase Cover/Sump)			
		----- Note -----	23	809236	Flywheel (Steel Ring Gear)			
		844724 Cover- (Used After Code Date 07101400). Used on Type No(s). 0203.			----- Note -----			
		808850 Cover- Crankcase (Used Before Code Date 07101500). Used on Type No(s). 0203.			841728 Flywheel Used on Type No(s). 0119, 0146, 0148, 0153, 0210, 0213, 0230, 0235, 0241, 0270, 0282, 0288, 0299, 0311, 0312, 0369, 0370, 0387, 0398, 0410, 1213, 1251.			
18A	844734	Cover-Crankcase (Used After Code Date 13103100). Used on Type No(s). 0005, 0010, 0036, 0115, 0174, 0300, 0356, 0395, 1308, 2308, 3005.			842442 Flywheel Used on Type No(s). 0130, 0165, 0207, 0292, 0350, 0374, 1165, 1415, 3415.	23B	841957	Flywheel Used on Type No(s). 0028, 0045, 0065, 0126, 0127, 0128, 0186, 0224, 0229, 0248, 0257, 0287, 0298, 0326, 0354, 0363, 0370, 0371, 0565, 0600, 0601, 1287.
		----- Note -----			842259 Flywheel Used on Type No(s). 0031, 0032, 0365, 0378, 0384.			
		844725 Cover- Crankcase (Used Before Code Date 13110100 and After Code Date 07101400). Used on Type No(s). 0005, 0009, 0010, 0115, 0116, 0149, 0150, 0174, 0175, 0234, 0264, 0271, 0300, 0308, 0320, 0356, 0395, 1308, 2308, 3005.			845489 Flywheel Used on Type No(s). 0036.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
25	843792	Piston Assembly (Standard) (Used After Code Date 07062900). ----- Note ----- 844540 Piston- Assembly (Standard) (Used Before Code Date 07063000). 843821 Piston Assembly (.020" Oversize)	50A	844034	Manifold-Intake Used on Type No(s). 0005, 0023, 0026, 0027, 0075, 0077, 0078, 0087, 0117, 0216, 0259, 0262, 0263, 0266, 0268, 0269, 0270, 0271, 0272, 0275, 0280, 0281, 0283, 0286, 0295, 0304, 0307, 0309, 0338, 0339, 0344, 0360, 0364, 0368, 1266, 1283, 1338, 1339, 3005, 3038, 3075, 3077, 3078, 3079, 3087, 3285, 3415.	73	841582	Screen-Rotating Used on Type No(s). 0002, 0042, 0114, 0115, 0116, 0148, 0154, 0156, 0172, 0174, 0175, 0179, 0220, 0230, 0236, 0239, 0285, 0286, 0304, 0308, 0312, 0338, 0365, 0386, 0387, 0406, 1154, 1239, 1308, 1338, 2308, 3285.	
26	843793	Ring Set (Standard) ----- Note ----- 843822 Ring Set (.020" Oversize)	51	691694	Gasket-Intake (Manifold To Carburetor)	73A	841662	Screen-Rotating ----- Note ----- 846079 Screen- Rotating Used on Type No(s). 0027, 0028, 0067, 0321, 0337.	
27	690683	Lock-Piston Pin	51A	692035	Gasket-Intake (Manifold to Head)	73B	841440	Screen-Rotating Used on Type No(s). 0001, 0007, 0008, 0011, 0019, 0021, 0022, 0023, 0026, 0036, 0044, 0079, 0088, 0100, 0117, 0118, 0124, 0129, 0135, 0139, 0140, 0141, 0146, 0153, 0157, 0158, 0159, 0162, 0171, 0177, 0178, 0191, 0197, 0200, 0201, 0203, 0205, 0209, 0213, 0216, 0222, 0225, 0228, 0232, 0235, 0237, 0240, 0250, 0251, 0259, 0263, 0264, 0268, 0270, 0271, 0275, 0280, 0283, 0295, 0305, 0307, 0309, 0310, 0314, 0315, 0319, 0322, 0344, 0348, 0351, 0352, 0355, 0360, 0361, 0364, 0367, 0375, 0380, 0381, 0404, 0410, 0602, 1140, 1213, 1251, 1283, 2309, 3038, 3079.	
28	844541	Pin-Piston (Standard)	54	846604	Screw (Intake Manifold)				
29	807900s	Rod-Connecting (Standard)	57	692086	Spring-Rewind Starter				
32	690698	Screw (Connecting Rod)	58	66574	Rope-Starter				
33A	807681	Valve-Exhaust	59	805957	Insert-Grip				
34A	807680	Valve-Intake	60	808167	Grip-Starter Rope				
35	692084	Spring-Valve (Intake)	65	690341	Screw (Rewind Starter)				
36	692084	Spring-Valve (Exhaust)			(5/16-18 x 0.875) (Used Before Code Date 14112700) ----- Note ----- 846234 Screw (Rewind Starter) (M8 X 22mm) (Used After Code Date 14112600)				
37	841309	Guard-Flywheel	65A	841233	Screw (Rewind Starter) (M6 x 10mm)				
40	692058	Retainer-Valve							
42	807683	Keeper-Valve							
45	843379	Tappet-Valve							
45A	690977	Tappet-Valve Used on Type No(s). 0173, 0208, 0378.							
46	845649	Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0005, 0009, 0010, 0036, 0115, 0116, 0149, 0150, 0174, 0175, 0234, 0264, 0271, 0300, 0308, 0320, 0356, 0395, 1308, 2308, 3005.							
46A	842064	Camshaft Used on Type No(s). 0173, 0208, 0378.							
50	690754	Manifold-Intake				73C	494439	Screen-Rotating Used on Type No(s). 0304.	

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-23 Assemblies include all parts shown in frames. 01/04/2016

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
74	841441	Screw (Rotating Screen) (M5x14mm)	97B	807495	Shaft-Throttle Used on Type No(s). 0023, 0026, 0162, 0200, 0307, 0360.	108A	806134	Valve-Choke ----- Note ----- 806134 Valve-Choke (Used After Code Date 05101000). Used on Type No(s). 0179.
74A	691647	Screw (Rotating Screen) (M5x30mm) Used on Type No(s). 0304.			----- Note ----- 807495 Shaft-Throttle (Used Before Code Date 05101100). Used on Type No(s). 0179.	108B	844989	Valve-Choke
77	690819	Motor-Servo (Motor-Servo Is No Longer Available)(See Reference 1463 For Replacement Kit)	98	808177	Kit-Idle Speed	109A	809096	Shaft-Choke Used on Type No(s). 0162, 0200, 0280.
78	690688	Screw (Flywheel Guard)	98A	808981	Kit-Idle Speed Used on Type No(s). 0010, 0023, 0026, 0036, 0162, 0179, 0200, 0280, 0286, 0304, 0307, 0360, 0395.			----- Note ----- 809096 Shaft-Choke (Used Before Code Date 05101100). Used on Type No(s). 0179.
86	690745	Cover-Gear	102	692077	Gasket-Carburetor Body	109B	843321	Shaft-Choke ----- Note ----- 808398 Shaft-Choke Used on Type No(s). 0286, 0307, 0360.
91	809208	Body-Upper Carburetor Used on Type No(s). 0162, 0200.	104	690723	Pin-Float Hinge			808398 Shaft-Choke (Used After Code Date 05101000). Used on Type No(s). 0179.
94	842880	Kit-Idle Mixture ----- Note ----- 842880 Kit-Idle- Mixture (Used After Code Date 05101000). Used on Type No(s). 0179.	105	797410	Valve-Float Needle ----- Note ----- 805620 Valve-Float Needle Used on Type No(s). 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0130, 0146, 0148, 0153, 0154, 0155, 0157, 0158, 0159, 0160, 0167, 0168, 0173, 0180, 0181, 0183, 0189, 0191, 0206, 0208, 0210, 0213, 0238, 0247, 0251, 0253, 0267, 0284, 0290, 0337, 0373, 0374, 0378, 0385, 0405, 0596, 0600, 0601.	110	806861	Washer (Choke Shaft)
94A	842870	Kit-Idle Mixture Used on Type No(s). 0162, 0200, 0280. ----- Note ----- 842870 Kit-Idle- Mixture (Used Before Code Date 05101100). Used on Type No(s). 0179.				117A	806373	Jet-Main (Standard) ----- Note ----- 806439 Jet-Main (Standard) Used on Type No(s). 0236, 0240, 0275, 0338, 0364, 0404, 1338, 3038.
94B	845021	Kit-Idle Mixture				117B	806126	Jet-Main (Standard)
94C	844987	Kit-Idle Mixture Used on Type No(s). 0023, 0026, 0307, 0360.	108	690719	Valve-Choke Used on Type No(s). 0162, 0200, 0280. ----- Note ----- 690719 Valve-Choke (Used Before Code Date 05101100). Used on Type No(s). 0179.	117D	842439	Jet-Main (Standard) Used on Type No(s). 0304, 0404.
95	690718	Screw (Throttle Valve)						
97	809062	Shaft-Throttle						
97A	842734	Shaft-Throttle Used on Type No(s). 0010, 0036, 0286, 0304, 0395. ----- Note ----- 842734 Shaft-Throttle (Used After Code Date 05101000). Used on Type No(s). 0179.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117E	690862	Jet-Main (Standard) Used on Type No(s). 0162, 0200, 0213, 0280. ----- Note ----- 690862 Jet-Main (Used Before Code Date 05101100). Used on Type No(s). 0179.	119	690720	Screw (Upper To Lower Carburetor Body)	125C	846109	Carburetor (with Air Cleaner Base) ----- Note ----- 846109 Carburetor (with Air Cleaner Base) (Used Before Code Date 10020200). Used on Type No(s). 0079, 0100, 0114, 0115, 0116, 0117, 0118, 0124, 0129, 0135, 0139, 0140, 0145, 0157, 0158, 0159, 0161, 0163, 0169, 0172, 0174, 0175, 0177, 0178, 0201, 0203, 0205, 0211, 0216, 0220, 0225, 0232, 0235, 0237, 0239, 0249, 0259, 0263, 0264, 0268, 0271, 0277, 0281, 0283, 0285,
117F	690881	Jet-Main (Standard) Used on Type No(s). 0307, 0360.	121	842881	Kit-Carburetor Overhaul	125D	845256	Carburetor Used on Type No(s). 0304. ----- Note ----- 846728 Carburetor Used on Type No(s). 0036.
118A	809685	Jet-Main (High Altitude) (5000 Feet) ----- Note ----- 690880 Jet Main (High Altitude) (9000 Feet)	121A	809021	Kit-Carburetor Overhaul Used on Type No(s). 0162, 0200.	125E	843325	Carburetor Used on Type No(s). 0162, 0200, 0280. ----- Note ----- 843325 Carburetor (Used Before Code Date 05101100). Used on Type No(s). 0179.
118C	842439	Jet-Main (High Altitude) (5000 Feet) ----- Note ----- 845903 Jet Main (High Altitude) (9000 Feet)	122	690691	Spacer-Carburetor Used on Type No(s). 0023, 0026, 0162, 0172, 0179, 0200, 0280, 0286, 0360, 0307.	125F	845241	Carburetor Used on Type No(s). 0023, 0026, 0307, 0360.
118D	841670	Jet-Main (High Altitude) (5000 Feet) ----- Note ----- 690881 Jet Main (High Altitude) (9000 Feet)	122A	690747	Spacer-Carburetor			
118E	808442	Jet-Main (High Altitude) (5000 Feet) ----- Note ----- 807012 Jet Main (High Altitude) (9000 Feet)	122B	845817	Spacer-Carburetor Used on Type No(s). 0010, 0036, 0395.			
118F	844990	Jet-Main (High Altitude) (5000 Feet) ----- Note ----- 809442 Jet Main (High Altitude) (9000 Feet)	125A	843326	Carburetor (Includes Solenoid) (Used After Code Date 05101000). Used on Type No(s). 0179, 0286.			
			125B	845023	Carburetor (Carburetor Only) ----- Note ----- 845017 Carburetor (Carburetor Only) (Used After Code Date 10010700) Used on Type No(s). 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0130, 0146, 0148, 0153, 0160, 0167, 0168, 0173, 0180, 0183, 0191, 0206, 0208, 0210, 0213, 0238, 0247, 0251, 0253, 0267, 0284, 0290, 0337, 0373, 0374, 0378, 0385, 0405, 0596, 0600, 0601.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-25 Assemblies include all parts shown in frames. 01/04/2016

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION																																							
125G	845015	Carburetor (Used After Code Date 10020100). Used on Type No(s). 0001, 0007, 0008, 0021, 0022, 0033, 0042, 0043, 0079, 0100, 0114, 0115, 0117, 0118, 0123, 0129, 0135, 0139, 0140, 0145, 0157, 0158, 0159, 0160, 0161, 0163, 0169, 0172, 0174, 0175, 0177, 0178, 0201, 0205, 0211, 0213, 0216, 0220, 0225, 0232, 0235, 0237, 0239, 0249, 0259, 0263, 0264, 0268, 0271, 0281, 0285, 0303, 0308, 0309, 0310, 0312, 0314, 0315, 0322, 0344, 0348, 0351, 0352, 0353, 0361, 0365, 0367, 0375, 0380, 0386, 0402, 0406, 0602, 1140, 1169, 1211, 1239, 1277, 1308, 2277, 2308, 2309, 3079, 3285. ----- Note ----- 845248 Carburetor Used on Type No(s). 0236, 0240, 0275, 0338, 0364, 0404, 1338, 3038.	125J	845841	Carburetor Used on Type No(s). 0010, 0395.	125K	846966	Carburetor Used on Type No(s). 0088.	127	690727	Plug-Welch	130	690726	Valve-Throttle Used on Type No(s). 0162, 0200, 0280, 0307, 0360. ----- Note ----- 690726 Valve-Throttle (Used Before Code Date 05101100) Used on Type No(s). 0179.	130C	806132	Valve-Throttle	132A	690863	Stop-Throttle ----- Note ----- 692155 Stop-Throttle Used on Type No(s). 0161.	133A	806961	Float-Carburetor Used on Type No(s). 0162, 0179, 0286, 0307, 0360.	133B	843320	Float-Carburetor	142	690725	Nozzle-Carburetor (Standard) Used on Type No(s). 0162, 0200.	142A	806128	Nozzle-Carburetor (Standard)	151	841185	Stud (Exhaust Manifold)	161	691561	Base-Air Cleaner (Metal)	161A	842830	Base-Air Cleaner (Metal) Used on Type No(s). 0114, 0117, 0139, 0156, 0158, 0161, 0172.	161B	808414	Base-Air Cleaner (Metal) Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0128, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0218, 0224, 0229.	161C	844929	Base-Air Cleaner (Metal) Used on Type No(s). 0001, 0002, 0004, 0005, 0009, 0013, 0016, 0021, 0027, 0032, 0033, 0036, 0042, 0043, 0065, 0066, 0075, 0077, 0078, 0087, 0088, 0096, 0115, 0118, 0119, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0129, 0130, 0133, 0135, 0140, 0141, 0142, 0145, 0146, 0148, 0149, 0150, 0153, 0154, 0155, 0157, 0159, 0160, 0161, 0162, 0163, 0164, 0165, 0167, 0168, 0169, 0171, 0173, 0174, 0175, 0177, 0178, 0180, 0181, 0183, 0189, 0191, 0194, 0195, 0197, 0199, 0202, 0205, 0206, 0207, 0208, 0209, 0210, 0211, 0213, 0214, 0215, 0216, 0217, 0219, 0222, 0223, 0225, 0228, 0232, 0233, 0234, 0237, 0238, 0239, 0243, 0247, 0249, 0251, 0252, 0253, 0259, 0262, 0264, 0266, 0367, 0368, 0369, 0270, 0271, 0272, 0277, 0283, 0284, 0285, 0290, 0292, 0295, 0304, 0305, 0307, 0308, 0315, 0319, 0324, 0328, 0331, ,0332, 0337, 0339, 0344, 0351, 0352, 0362, 0365, 0367, 0369, 0374, 0375, 0386, 0397, 0411, 0600, 0601, 0603, 0604, 0606, 0607, 1154, 1415. ----- Note -----
125H	846082	Carburetor (Gravity Feed) (Used Before Code Date 10010800). Used on Type No(s). 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0130, 0146, 0148, 0153, 0160, 0167, 0168, 0173, 0180, 0183, 0191, 0206, 0208, 0210, 0213, 0238, 0247, 0251, 0253, 0267, 0284, 0290, 0337, 0600, 0601.																																													

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	845142	Base-Air Cleaner Used on Type No(s). 0006, 0019, 0023, 0026, 0031, 0034, 0040, 0068, 0097, 0149, 0150, 0173, 0261, 0300, 0303, 0305, 0314, 0316, 0318, 0319, 0320, 0322, 0327, 0345, 0348, 0350, 0353, 0356, 0359, 0360, 0368, 0378, 0380, 0383, 0394, 0395, 0402, 0602, 0609, 1140, 1155, 1165, 1169, 1189, 1211, 1217, 1239, 1266, 1270, 1277, 1283, 1308, 1339, 2133, 2243, 2277, 2308, 2309, 3005, 3075, 3077, 3078, 3079, 3087, 3285, 3415.	187B	846567	Line-Fuel (Formed)	187F	844560	Line-Fuel Used on Type No(s). 0007, 0008, 0010, 0011, 0018, 0020, 0067, 0122, 0125, 0127, 0128, 0130, 0186, 0210, 0224, 0226, 0229, 0230, 0233, 0241, 0244, 0248, 0250, 0257, 0270, 0279, 0282, 0287, 0288, 0293, 0297, 0298, 0299, 0311, 0312, 0317, 0317, 0326, 0337, 0340, 0346, 0354, 0355, 0361, 0363, 0370, 0372, 0373, 0374, 0377, 0381, 0385, 0387, 0384, 0389, 0396, 0398, 0566, 0565, 0596, 0600, 0601, 1213, 1226, 1251, 1287.
			187C	692106	Line-Fuel (2.25" long)			
			187D	791744	Line-Fuel (Formed) (14" Cut To Required Length) ----- Note ----- 791801 Line- (Formed) (7.34" Cut To Required Length)			
161D	845088	Base-Air Cleaner (Metal)	187E	844556	Line-Fuel Used on Type No(s). 0007, 0008, 0009, 0010, 0011, 0018, 0020, 0021, 0065, 0066, 0067, 0096, 0122, 0125, 0127, 0128, 0130, 0146, 0148, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0210, 0213, 0224, 0226, 0229, 0230, 0233, 0238, 0241, 0244, 0247, 0248, 0250, 0251, 0253, 0257, 0267, 0270, 0279, 0282, 0284, 0287, 0288, 0293, 0297, 0298, 0299, 0311, 0312, 0317, 0326, 0337, 0340, 0346, 0354, 0355, 0361, 0363, 0370, 0372, 0373, 0374, 0377, 0381, 0385, 0387, 0384, 0389, 0396, 0398, 0566, 0565, 0596, 0600, 0601, 1213, 1226, 1251, 1287.			
161E	844994	Base-Air Cleaner Used on Type No(s). 0022, 0114, 0117, 0139, 0158, 0161, 0172, 0220, 0263, 0310, 0406. ----- Note ----- 845600 Base-Air Cleaner Used on Type No(s). 0001.				187G	791745	Line-Fuel (23" Long) (Cut to Required Length)
161F	844996	Base-Air Cleaner						
163A	692081	Gasket-Air Cleaner						
163B	844931	Gasket-Air Cleaner						
163C	841823	Gasket-Air Cleaner						
165	693148	Nut (Ring Gear)						
182E	841601	Bracket-Fuel Tank						
182F	691520	Bracket-Fuel Tank						
182G	841600	Bracket-Fuel Tank						
182H	691524	Bracket-Fuel Tank						
182J	691525	Bracket-Fuel Tank						
186	844032	Connector-Hose						
186A	845121	Connector-Hose						
186B	845141	Connector-Hose						
186C	693184	Connector-Hose						
187	791766	Line-Fuel (15" Long) (Cut To Required Length)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-27 Assemblies include all parts shown in frames. 01/04/2016

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187H	846318	Line-Fuel (Formed) (Used After Code Date 15061500) Used on Type No(s). 0007, 0008, 0010, 0011, 0018, 0020, 0028, 0044, 0045, 0067, 0069, 0122, 0127, 0128, 0130, 0233, 0241, 0270, 0279, 0288, 0289, 0297, 0298, 0299, 0311, 0321, 0326, 0340, 0346, 0354, 0355, 0361, 0363, 0370, 0371, 0372, 0373, 0374, 0381, 0384, 0385, 0387, 0389, 0396, 0398, 0403, 0408, 0410, 0565, 0566, 0596, 0610, 1213, 1226, 1251, 1279.	209	692070	Spring-Governor (Main) ----- Note ----- 692071 Spring- Governor (White) Used on Type No(s). 0117, 0118, 0135, 0140, 0161, 0179, 0263, 0268, 0277, 0281, 0286, 0304, 0309, 0344, 0380, 0402, 1140, 1277, 2277, 2309. 692072 Spring- Governor (Purple) Used on Type No(s). 0008, 0295, 0351, 0386, 0406. 691506 Spring- Governor (Yellow) Used on Type No(s). 0006, 0031, 0032, 0067, 0068, 0078, 0097, 0141, 0152, 0154, 0194, 0219, 0261, 0319, 0339, 1339, 3078. 691508 Spring- Governor (Blue) Used on Type No(s). 0001, 0002, 0022, 0147, 0156, 0158, 0172, 0179, 0201, 0232, 0240, 0247, 0275, 0279, 0295, 0310, 0364, 0396, 0404, 0405, 0408, 0610, 1279. 690716 Spring- Governor (Green) Used on Type No(s). 0133, 0142, 0189, 0243, 0269, 0284, 0290, 0297, 0303, 0316, 0317, 0334, 0336, 0345, 0365, 0609, 1189, 1415, 2133, 2243, 3415.			691507 Spring- Governor (Brown) Used on Type No(s). 0001, 0034, 0045, 0129, 0154, 0164, 0199, 0211, 0217, 0223, 0224, 0266, 0292, 0328, 0340, 1154, 1211, 1217, 1266. 805630 Spring- Governor Used on Type No(s). 0173, 0208, 0378. 806507 Spring- Governor (Black) Used on Type No(s). 0165, 0355, 1165. 806872 Spring- Governor (Orange) Used on Type No(s). 0162, 0200, 0280, 0307, 0360.
187J	846965	Line-Fuel (405mm Long) (Cut to Required Length)				209A	690709	Spring-Governor Used on Type No(s). 0004, 0013, 0121, 0122, 0126, 0128, 0202, 0203, 0214, 0252, 0253, 0332, 0348, 0371, 0372, 0397. ----- Note ----- 690710 Spring- Governor Used on Type No(s). 0216, 0259, 0314, 0361.
188	692056	Screw (Control Bracket) (M8x14mm) ----- Note ----- 845964 Screw (M8x10mm) (Control Bracket)						209B 845816 Spring-Governor Link Used on Type No(s). 0010, 0036, 0395.
190	692199	Screw (Fuel Tank)						
192	807623	Adjuster-Rocker Arm						
197	807163	Screw (Back Plate)						
203	690923	Crank-Bell						
203A	808753	Crank-Bell Used on Type No(s). 0021, 0022, 0023, 0026, 0236, 0240, 0275, 0338, 0364, 3075.						
205	692083	Screw (Bell Crank)						
206	691244	Nut-Governor Adjusting						
208	808453	Rod-Governor Control						
208A	844796	Rod-Governor Control Used on Type No(s). 0006, 0031, 0032, 0068, 0097, 0261, 0339, 0348, 1339.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
210	691370	Strainer-Fuel	211A	690707	Spring-Governed Idle (White)	227	690236	Lever-Governor Control
210A	845270	Strainer-Fuel Used on Type No(s). 0007, 0008, 0010, 0011, 0028, 0147, 0224, 0229, 0248, 0257, 0270, 0287, 0297, 0298, 0299, 0311, 0312, 0317, 0321, 0326, 0346, 0355, 0361, 0363, 0370, 0371, 0372, 0373, 0374, 0377, 0381, 0385, 0387, 0389, 0396, 0403, 0565, 0566, 0596, 0610, 1213, 1226, 1251, 1279.			Used on Type No(s). 0004, 0121, 0122, 0126, 0128, 0202, 0203, 0214, 0252, 0253, 0332, 0348, 0371, 0372, 0397.			----- Note ----- 845484 Lever-Governor Control Used on Type No(s). 0004, 0013, 0067, 0078, 0121, 0122, 0126, 0128, 0141, 0152, 0173, 0194, 0202, 0203, 0208, 0214, 0219, 0252, 0253, 0332, 0371, 0372, 0378, 0397, 3078.
211	692069	Spring-Governed Idle (Red) ----- Note ----- 692068 Spring-Governed Idle (Red) Used on Type No(s). 0006, 0031, 0032, 0067, 0068, 0078, 0097, 0141, 0152, 0162, 0173, 0179, 0194, 0208, 0219, 0261, 0319, 0339, 1339, 3078. 691505 Spring-Governed Idle (White) Used on Type No(s). 0133, 0135, 0142, 0164, 0211, 0217, 0223, 0266 0292, 0295, 0365, 0609, 1211, 1217, 1226, 1415, 2133, 3415. 691553 Spring-Governed Idle (Green) Used on Type No(s). 0165, 0268, 1165. 806868 Spring-Governed Idle (Blue) Used on Type No(s). 0162, 0200, 0280, 0307, 0360.	212	847015	Link-Throttle	227A	844799	Lever-Governor Control Used on Type No(s). 0006, 0031, 0032, 0068, 0097, 0261, 0339, 0348, 1339.
			212A	691519	Link-Throttle	231	690718	Screw (Choke Valve)
			212B	845328	Link-Throttle	232	692073	Spring-Governor Link
			215	841183	Cover-Cylinder Head (Cylinder 1)	234	691723	Clip-Control Rod
			215A	841316	Cover-Cylinder Head (Cylinder 2) Used on Type No(s). 0016, 0021, 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 0201, 0225, 0232, 0237, 0285, 0286, 0304, 0328, 1154, 3285.	239	690233	Switch-Oil Pressure ----- Note ----- 491657s Switch-Oil Pressure Used on Type No(s). 0218. 841281 Switch-Oil Pressure Used on Type No(s). 0001, 0021, 0031, 0032, 0043, 0088, 0126-E1, 0126-G1, 0208, 0378, 0408. 697049 Switch-Oil Pressure Used on Type No(s). 0069, 0259, 0314, 0361.
			215B	841317	Cover-Cylinder Head (Cylinder 1) Used on Type No(s). 0016, 0021, 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 0201, 0225, 0232, 0237, 0285, 0286, 0304, 0328, 1154, 3285.			
			215E	846985	Cover-Cylinder Head (Cylinder 1) Used on Type No(s). 0088.			
			215F	841182	Cover-Cylinder Head (Cylinder 2)			
			216	690705	Link-Choke			
			217	806862	Spring-Choke Return			
			222	845305	Bracket-Control			
			226	692075	Rod-Hand Choke			

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
240	844545	Filter-Fuel	300D	692099	Muffler	309	691564	Motor-Starter
240A	808116s	Filter-Fuel	300E	690906	Muffler			(Used Before Code
240B	691035	Filter-Fuel	300F	690931	Muffler			Date 14052800)
240C	845125	Filter-Fuel			(Hi Mount)			(Steel Ring Gear Only)
254	808178	Drain-Carburetor Bowl			(Starter Side Exit)			Used on Type No(s).
255	690721	Bushing-Choke Shaft			Used on Type No(s).			0020, 0023, 0026,
262	692083	Screw			0016, 0129, 0154,			0117, 0129, 0147,
		(Rod Bracket)			0199, 0328, 1154.			0161, 0168, 0179,
		(M5x12mm)	300G	691562	Muffler			0200, 0205, 0206,
		----- Note -----			Used on Type No(s).			0209, 0263, 0268,
		841552 Screw			0067, 0069, 0133,			0280, 0286, 0295,
		(Rod Bracket)			0172, 0206, 0240,			0304, 0307, 0321,
		(M5x20mm SEMS)			0249, 0257, 0270,			0337, 0351, 0352,
265	691024	Clamp-Casing			0271, 0272, 0275,			0360, 0386, 0405,
267	692083	Screw			0332, 0354, 0359,			0406.
		(Casing Clamp)			0364, 0383, 0411,	309A	846407	Motor-Starter
		(M5x12mm)			0602, 1270, 2133.			Used on Type No(s).
		----- Note -----			----- Note -----			0116, 0155, 0166,
		841552 Screw			692464 Muffler			0167, 0183, 0175,
		(Casing Clamp)			Used on Type No(s).			0315, 0324, 0364,
		(M5x20mm SEMS)			0161, 0322.			0404, 1155.
268	691025	Casing-Control Wire	300K	808379	Muffler	309B	846451	Motor-Starter
269	691026	Wire-Control	300L	808380	Muffler			(Used After Code Date
270	691027	Nut	304	844153	Housing-Blower			14052700)
		(Control Wire Casing)			(Black with Rewind			Used on Type No(s).
271	692541	Lever-Control			Weld Studs)			0020, 0023, 0026,
271A	692105	Lever-Control	304A	842742	Housing-Blower			0117, 0129, 0147,
271B	691028	Lever-Control			(Black with Rewind			0161, 0168, 0179,
273	690681	Seal-O Ring			Weld Studs and Oil			0200, 0205, 0206,
		(Oil Pump)			Cooler Holes)			0209, 0263, 0268,
276	690724	Washer-Sealing	305	692056	Screw			0280, 0286, 0295,
276A	807085	Washer-Sealing			(Blower Housing)			0304, 0307, 0321,
		(Head)(Rocker Cover)			(M8x14mm)			0337, 0351, 0352,
276B	806137	Washer-Sealing			----- Note -----			0360, 0386, 0405,
		(Solenoid)			692551 Screw			0406.
276C	690704	Washer-Sealing			(Blower Housing)	309C		Motor-Starter
278	842122	Washer			(1/4-20 x 1.16" Lg)			(For Replacement
		(Governor Control	305A	841233	Screw			Starter Motor, Order
		Lever)			(Blower Housing)			Reference 309)
280	691526	Bracket-Rod			(M6 X 10mm)	309D	808817	Motor-Starter
281	690742	Panel-Control						(Used After Code Date
282	692083	Screw						10051700)
		(Control Lever)						Used on Type No(s).
287	692062	Screw						0315, 0324, 0364,
		(Dipstick Tube)						0404, 1155.
		(M8x18mm)				309E	844717	Motor-Starter
287A	806660	Screw						
		(Dipstick Tube)						
		(M8x18mm)						
290	809911	Screw						
		(Adapter-Air Cleaner)						
300B	498984s	Muffler						
		Used on Type No(s).						
		0001, 0008, 0158,						
		0201, 0232.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
310		Screw (Starter Motor) (For Replacement Armature, Order Reference 309)	357	691483	Key-Drive Pulley	437	691902	Screw (Exhaust Manifold) (M8x20mm SEMS)
310A	690323	Screw (Starter Motor)	358	841188	Gasket Set-Engine	439	692154	Seal-O Ring (Crankcase Cover/Sump)
311A	497608	Brush Set	359	691077	Washer (Ground Terminal)	445	394018s	Filter-Air Cleaner Cartridge
311B	825411	Brush Set	363	19203	Puller-Flywheel	----- Note -----		
318	690932	Screw (Mounting Bracket)	365	690711	Screw (Carburetor)	692519		Filter-Air Cleaner Cartridge Used on Type No(s). 0220.
320	1726829sm	Relay (Single Pole, Double Throw)	373	691612	Nut (Ground Terminal)	445B	845090	Filter-Air Cleaner Cartridge (Used After Code Date 11042700).
322	841233	Screw (Cylinder Head Cover)	377	808095	Key-Woodruff	----- Note -----		
322A	692067	Screw (Cylinder Head Cover) (M6x12mm) Used on Type No(s). 0016, 0021, 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 0201, 0225, 0232, 0237, 0285, 0286, 0304, 0238, 1154, 3285.	37A	691639	Key-Woodruff	393957s		Filter-Air Cleaner (Used Before Code Date 11042800).
332	690887	Nut (Flywheel)	383	19576s	Wrench-Spark Plug	445C	841497	Filter- Air Cleaner Cartridge Used on Type No(s). 0275, 0364.
333	844548	Armature-Magneto	385	807084	Screw (Fuel Pump)	----- Note -----		
334	692066	Screw (Magneto Armature)	387	808656	Pump-Fuel	845768		Pump-Fuel Used on Type No(s). 0016, 0328.
337	491055s	Plug-Spark (Resistor) (RC12YC)	388	820799	Lever-Pinion Drive	820263		Filter-Air Cleaner Cartridge Used on Type No(s). 0240, 0404.
		----- Note -----	400	808657	Cooler-Oil	445D	821136	Filter- Air Cleaner Cartridge Used on Type No(s). 0275, 0364.
		792015 Plug-Spark (Resistor - EMS) (XC92YC)	401	845814	Link-Actuator	447	841233	Screw (Air Guide Cover)
		496018S Plug-Spark (Resistor - Hot) (RC14YC)	402	690679	Screw (M6x21mm) (Cover-Oil Filter)	448	841488	Bracket-Oil Cooler
		691043 Plug-Spark (EMS) (QC12YC)	413	693587	Nut (Starter Motor)	454	693289	Cap-Breather
346	690661	Screw (Spark Arrestor) (#8-18 x .375" Type B)	415	794903	Plug (1/8-27 NPTF External Sq)	455	841794	Cup-Flywheel
347	795333	Switch-Rocker	417	843345	Screw (Oil Cooler)	456	845219	Plate-Pawl Friction
349	690238	Nut (Cylinder 0127r Head Cover)	432	691509	Cap-Spring	459	845218	Pawl-Ratchet
355	690944	Washer	436	692061	Manifold-Exhaust (Lo Mount) (Oil Filter Side)	460	806667	Connector-Filter Adapter
356	690796	Wire-Stop (Control Panel)	436A	691499	Manifold-Exhaust (Lo Mount) (Starter Motor Side)	466	806466	Seal-O Ring (Breather Assembly)
			436B	691501	Manifold-Exhaust			
			436C	691502	Manifold-Exhaust (Cylinder 1) (Side Outlet)			
			436D	805609	Manifold-Exhaust (Side Outlet)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-31 Assemblies include all parts shown in frames. 01/04/2016

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
467	844618	Knob-Air Cleaner (Used After Code Date 1003310). ----- Note ----- 691985 Knob-Air Cleaner (Used Before Code Date 10040100).	474F	841588	Alternator (20 Amp) Used on Type No(s). 0116, 0166, 0167, 0175. ----- Note ----- 841178 Alternator (50 Amp) Used on Type No(s). 0130, 0165, 0207, 0292, 0315, 0350, 0374, 1165, 1415, 3415.	501B	691573	Regulator (20 Amp) Used on Type No(s). 0008, 0009, 0019, 0034, 0040, 0115, 0116, 0135, 0142, 0166, 0167, 0174, 0175, 0178, 0195, 0209, 0217, 0234, 0239, 0259, 0262, 0264, 0266, 0270, 0271, 0277, 0281, 0283, 0308, 0309, 0314, 0318, 0339, 0348, 0353, 0355, 0361, 0368, 0377, 0383, 0389, 0402, 0609, 1217, 1239, 1266, 1270, 1277, 1283, 1308, 1339, 2277, 2308, 2309.
467A	691668	Knob-Air Cleaner Cover	479	807084	Screw (Oil Pump Screen)	501C	841170	Regulator (20-50 Amp) Used on Type No(s). 0130, 0165, 0207, 0292, 0315, 0350, 0374, 1165, 1415, 3415.
468	690690	Seal-O Ring (Oil Pump Screen)	480	806660	Screw (Hose-Purge Line) (M8x18mm)	501	845481	Regulator (16 Amp) Used on Type No(s). 0036.
474	845483	Alternator (16 Amp) Used on Type No(s). 0036.	493	691518	Bracket-Mounting	503	691532	Strap-Starter
474B	592828	Alternator (DC Only) Used on Type No(s). 0270, 0288, 0299.	493A	845729	Bracket-Mounting	503A	845016	Strap-Starter
474C	592829	Alternator (9 Amp Regulated) Used on Type No(s). 0044, 0146, 0148, 0153, 0210, 0213, 0230, 0235, 0241, 0251, 0282, 0311, 0312, 0387, 0398, 0410, 1213, 1251.	500	691086	Washer (Key Switch)	505	690238	Nut (Governor Control Lever)
474D	592830	Alternator (10-16 Amp Regulated)	501	845907	Regulator (16 Amp) ----- Note ----- 493219 Regulator (16 Amp) Used on Type No(s). 0018, 0027, 0123, 0124, 0125, 0177, 0216, 0218, 0233, 0244, 0249, 0289, 0327, 0334, 0336, 0373.	506	807120	Screw (Carburetor Cover)
474E	696579	Alternator (20 Amp) Used on Type No(s). 0008, 0009, 0019, 0034, 0040, 0069, 0115, 0135, 0142, 0174, 0178, 0195, 0209, 0217, 0234, 0239, 0259, 0262, 0264, 0266, 0270, 0271, 0277, 0281, 0283, 0308, 0309, 0314, 0318, 0339, 0348, 0353, 0355, 0361, 0368, 0377, 0383, 0389, 0402, 0609, 1217, 1239, 1266, 1270, 1277, 1283, 1308, 1339, 2277, 2308, 2309.	501A	794360	Regulator (5 To 9 Amp) Used on Type No(s). 0044, 0146, 0148, 0153, 0210, 0213, 0230, 0235, 0241, 0251, 0282, 0311, 0312, 0387, 0398, 0410, 1213, 1251.	507	691972	Insulator
						510	496881	Drive-Starter
						515	691528	Spring-Pawl
						520	691084	Terminal-Ground
						523	693175	Dipstick
						524	693172	Seal-Dipstick Tube
						525	693174	Tube-Dipstick (Standard)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
525A	693173	Tube-Dipstick Used on Type No(s). 0005, 0022, 0237, 0263, 0285, 0310, 3005, 3285.	573	841310	Plate-Back ----- Note ----- 841311 Plate-Back Used on Type No(s). 0116, 0166, 0167, 0175.	604	845821	Cover-Control
526	692067	Screw (Regulator)(10-16 Amp Regulated) (M6x12mm)				608	841729	Starter-Rewind
526A	690717	Screw (Regulator)(5 To 9 Amp Regulated) Used on Type No(s). 0146, 0148, 0153, 0210, 0213, 0230, 0235, 0241, 0251, 0282, 0311, 0312, 0387, 0398, 1213, 1251.				613	691902	Screw (Muffler) (M8x20mm SEMS) ----- Note ----- 692328 Screw (Muffler) (3/8"-24x1.0 inches) Used on Type No(s). 0154.
526B	691547	Screw (Regulator)	577	690795	Cable-Starter	613A	692067	Screw (Muffler) (M6x12mm)
527	690423	Clamp-Tube	578	692306	Wire Assembly (1 Wire, 48-1/2" Long) (Snap Connect Female Pin Socket, And Bare Wire End)	614	691550	Retainer-Governor Shaft
529	690744	Grommet	578A	844547	Wire Assembly	616	806685	Crank-Governor
529A	691527	Grommet	578B	845849	Wire-Assembly	620	494052	Panel-Speed Control
532	691115	Nut (Mounting Bracket)	578C	690809	Wire-Assembly	628	806660	Screw (Fuel Pump Bracket) (Hex, M8x18mm)
536	809670	Cleaner-Air	578E	691999	Wire-Assembly	628A	692062	Screw (Fuel Pump Bracket) (Hex Flange, M8x18mm)
544		Armature-Starter (For Replacement Armature, Order Reference 309)	578F	594194	Wire-Assembly Used on Type No(s). 0018, 0027, 0123, 0124, 0233, 0249, 0327, 0373, 0385.	629	806717	Spring-Throttle Return
544A		Armature-Starter (Service With 691564 Starter Motor Only)	582	809878	Clamp-Air Cleaner ----- Note ----- 807381 Clamp-Air Cleaner Used on Type No(s). 0240, 0275, 0404.	629A	806716	Spring-Throttle Return
552	690701	Bushing-Governor Crank (Output End)				633	690722	Seal-Choke/Throttle Shaft
552A	806686	Bushing-Governor Crank	587	807116	Clamp-Cable	633A	806131	Seal-Choke/Throttle Shaft
561	690713	Nut (Control Lever)	592	690939	Nut (Rewind Starter) (M6)	635	692076	Boot-Spark Plug
562	690239	Bolt (Governor Control Lever)	596	691492	Screw (Oil Pump)	638	691551	Washer (Cylinder Cover) (Internal Tooth Lockwasher)
563	841735	Screw (Debris Screen Guard)	598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)	638A	690706	Washer (Cylinder Head Cover) (Internal Tooth Lock-washer) Used on Type No(s). 0016, 0021, 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 0201, 0225, 0232, 0237, 0285, 0286, 0304, 0238, 1154, 3285.
564	690677	Screw (Control Cover)	601	691038	Clamp-Hose			
565	690682	Stud (Oil Filter Adapter)	601B	791850	Clamp-Hose			
572	690686	Baffle-Breather	601C	691522	Clamp-Hose			
			601D	841597	Clamp-Hose (Oil Hose)			
			601E	593879	Clamp-Hose			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-33 Assemblies include all parts shown in frames. 01/04/2016

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
643	844932	Retainer-Air Filter (Used After Code Date 09123100).	650	841233	Screw (Oil Deflector)	723	845818	Seal-Foam
		----- Note -----	664	691087	Nut (Key Switch)	725A	805702	Shield-Heat
643A	692079	Retainer-Air Filter (Used Before Code Date 10010100).	668A	691500	Spacer	725B	691498	Shield-Heat
643B	690447	Retainer-Air Filter Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0218, 0298, 0565.	674	692056	Screw (Fuel Tank Bracket) (M8x14mm)	725C	806102	Shield-Heat
643C	845087	Retainer-Air Filter Used on Type No(s). 0007, 0008, 0009, 0010, 0011, 0018, 0020, 0028, 0043, 0044, 0045, 0065, 0066, 0067, 0069, 0096, 0122, 0125, 0127, 0128, 0130, 0146, 0147, 0148, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0210, 0213, 0224, 0226, 0229, 0230, 0233, 0238, 0241, 0244, 0247, 0248, 0250, 0251, 0253, 0257, 0267, 0270, 0279, 0287, 0288, 0290, 0293, 0297, 0298, 0299, 0311, 0312, 0317, 0321, 0326, 0332, 0334, 0337, 0340, 0346, 0354, 0355, 0361, 0363, 0364, 0370, 0371, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0396, 0398, 0405, 0410, 0565, 0566, 0596, 0600, 0601, 1213, 1251, 1287.	674B	692062	Screw (Fuel Tank Bracket) (M8x18mm)	726		Gear-Ring (Steel)(See Reference 23 for Service)
			676	795036	Deflector-Muffler	727	841313	Cover-Starter Drive
			676A	795038	Deflector-Muffler	728	691514	Screw (Heat Shield)
			676B	396903	Deflector-Muffler	728B	692067	Screw (Heat Shield) (M6x12mm)
			676C	495518	Deflector-Muffler	729	690586	Clip-Wire
			677	810079	Screw (Muffler Deflector)	732	690688	Screw (Starter Drive Cover)
			677B	690661	Screw (Muffler Deflector) (#8-18 x .375 Type B)	732A	841233	Screw (Starter Drive Cover)
			678	841730	Spacer-Rewind	737	690679	Screw (M6x21mm) (Oil Filter Adapter)
			683	691029	Nut (Starter Solenoid)	737A	841233	Screw (M6x10mm) (Oil Filter Adapter)
			683A	820809	Nut (Starter Solenoid)	741	846085	Gear-Timing
			689	691272	Spring-Friction	773		Retainer (For Replacement Starter Motor, Order Reference 309B)
			691	842826	Seal-Governor Shaft	774	692067	Screw (Stop Wire) (M6x12mm)
			697	692062	Screw (Drive Cap) (M8x18mm)	788	691559	Bracket-Fuel Pump (With Weld Nuts)
					----- Note -----			----- Note -----
			703	691010	Clip			844643 Bracket-Fuel Pump Used on Type No(s). 0023, 0026, 0162, 0179, 0200, 0241, 0280, 0286, 0304, 0307, 0340, 0360, 0398, 0403, 0566, 0596.
			710	807689	Cover-Oil Filter			
			711	841233	Screw (Carburetor Shield)			
			717	692153	Bracket-Air Cleaner			
			717A	841886	Bracket-Air Cleaner Used on Type No(s). 0364.			
			717B	692542	Bracket-Air Cleaner			
			718	806469	Pin-Locating			
			718B	841581	Pin-Locating (Used After Code Date 04021500).			
					----- Note -----			
					690740 Pin-Locating (Used Before Code Date 04021600).			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
789	691996	Harness-Wiring ----- Note ----- 841318 Harness-Wiring Used on Type No(s). 0155, 0183, 0324, 1155. 842744 Harness-Wiring Used on Type No(s). 0166, 0167. 691578 Harness-Wiring Used on Type No(s). 0009, 0034, 0040, 0142, 0195, 0209, 0217, 0234, 0239, 0259, 0262, 0266, 0270, 0283, 0314, 0318, 0339, 0353, 0355, 0361, 0368, 0377, 0383, 0389, 0609, 1217, 1239, 1266, 1270, 1283, 1339. 845850 Harness-Wiring Used on Type No(s). 0010, 0395.	789E	846767	Wire Assembly (Used After Code Date 15061500) Used on Type No(s). 0007, 0011, 0044, 0045, 0067, 0270, 0297, 0299, 0311, 0321, 0346, 0372, 0373, 0381, 0387, 0396, 0403, 0408, 0410, 0566, 0596, 0610, 1213, 1226, 1251, 1279	803C	820783	Housing-Starter
						804	844727	Canister-Carbon Used on Type No(s). 0007, 0008, 0010, 0011, 0028, 0147, 0224, 0229, 0248, 0257, 0270, 0287, 0297, 0298, 0299, 0311, 0312, 0317, 0321, 0326, 0346, 0355, 0361, 0363, 0370, 0371, 0372, 0373, 0374, 0377, 0381, 0385, 0387, 0389, 0396, 0403, 0565, 0566, 0596, 0610, 1213, 1226, 1251, 1279.
			789F	846821	Wire Assembly Used on Type No(s). 0069, 0355, 0361, 0389.	807	805557	Spacer-Throttle
			797	691029	Nut (Brush Retainer)	813	690635	Clamp
			797A	693167	Nut (Brush Retainer)	816	690706	Washer (Oil Filter Adapter)
			801		Cap-Drive (For Replacement, Order Starter Motor Reference 309)	819	692056	Screw (Muffler Bracket) (M8x14mm)
			801B	691283	Cap-Drive	819A	690943	Screw (Muffler Bracket) (M8x16mm)
			802A	691286	Cap-End	819D	692062	Screw (Muffler Bracket) (M8x18mm)
			802C		Cap-End (For Replacement Starter Motor, Order Reference 309B)	829	841999	Hose-Oil
789B	844549	Wire Assembly Used on Type No(s). 0005, 0009, 0115, 0116, 0149, 0150, 0174, 0175, 0234, 0264, 0271, 0300, 0308, 0356, 2308, 3005.	803		Housing-Starter (For Replacement Order Starter Motor Reference 309)	830	809157	Stud-Rocker Arm
					Housing-Starter (For Replacement Armature, Order Reference 309)	832	691571	Guard-Muffler
789C	844798	Wire Assembly Used on Type No(s). 0006, 0031, 0032, 0068, 0097, 0261, 0339, 0348, 1339.	803A		Housing-Starter (For Replacement Armature, Order Reference 309)	833	841233	Screw (Air Cleaner Mounting Strap/Stud)
			803B		Housing-Starter (For Replacement Armature, Order Reference 309)	833B	691593	Screw (Air Cleaner Mounting Strap/Stud) (M6x12mm)
789D	845788	Wire Assembly Used on Type No(s). 0010, 0036, 0395.				836	691514	Screw (Muffler Guard)
						836A	692067	Screw (Muffler Guard) (M6x12mm)
						837	808085	Spacer-Muffler
						847	846409	Dipstick-Tube Assy Used on Type No(s). 0005, 0022, 0237, 0263, 0285, 0310, 3005, 3285.
						849	691088	Screw (Stub Shaft) (Stub Shaft) (5/16-18x1.1)

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
849A	846236	Screw (Stub Shaft) (M8x34.5mm)	877D	698092	Wire/Connector- Alternator	879A	842132	Cover-Carburetor (Used After Code Date 04093000).
855	845586	Adapter-Air Cleaner Used on Type No(s). 0304.	878	691362	Harness-Alternator			Used on Type No(s). 0006, 0008, 0009, 0010, 0011, 0018, 0027, 0028, 0031, 0032, 0044, 0045, 0065, 0066, 0067, 0096, 0097, 0122, 0125, 0127, 0128, 0130, 0160, 0167, 0180, 0186, 0206, 0210, 0218, 0224, 0229, 0233, 0238, 0241, 0244, 0247, 0248, 0250, 0251, 0253, 0257, 0270, 0279, 0282, 0284, 0287, 0289, 0290, 0293, 0297, 0298, 0311, 0316, 0317, 0321, 0326, 0334, 0336, 0337, 0340, 0346, 0354, 0355, 0363, 0370, 0371, 0372, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0396, 0403, 0408, 0410, 0565, 0566, 0596, 0600, 0601, 0610, 1213, 1226, 1251, 1287.
862D	845089	Strap/Stud-Air Cleaner Mounting (Used After Code Date 09123100). ----- Note ----- 691565 Strap/Stud-Air Cleaner Mounting (Used Before Code Date 10010100).	879	841607	Cover-Carburetor ----- Note ----- 842129 Cover- Carburetor (Used Before Code Date 04100100). Used on Type No(s). 0065, 0119, 0126, 0127, 0128, 0369, 0385. 842128 Cover- Carburetor (Used Before Code Date 04100100). Used on Type No(s). 0009, 0066, 0096, 0122, 0125, 0367, 0368, 0375. 842128 Cover- Carburetor Used on Type No(s). 0001, 0004, 0005, 0033, 0034, 0040, 0042, 0043, 0068, 0075, 0077, 0078, 0079, 0087, 0088, 0121, 0123, 0133, 0141, 0142, 0145, 0149, 0150, 0152, 0155, 0157, 0166, 0169, 0173, 0181, 0194, 0195, 0197, 0202, 0203, 0207, 0209, 0214, 0215, 0216, 0217, 0219, 0222, 0223, 0234, 0235, 0239, 0249, 0252, 0259, 0261, 0262, 0266, 0270, 0272, 0283, 0300, 0314, 0319, 0320, 0322, 0324, 0327, 0332, 0339, 0353, 0356, 0359, 0383, 0394, 0395, 0397, 0411, 0602, 0603, 0604, 0606, 0607, 0609, 1169, 1217, 1266, 1283, 2133, 3005, 3075, 3077, 3078, 3079, 3087.			----- Note ----- 842132 Cover-Carburetor Used on Type No(s). 0007, 0146, 0147, 0148, 0153, 0168, 0183, 0191, 0208, 0213, 0312, 0389, 0398, 0405, 1270.
863	691513	Bracket-Muffler ----- Note ----- 690756 Bracket- Muffler Used on Type No(s). 0186, 0224, 0363, 0369.				879B	842269	Cover-Carburetor Used on Type No(s). 0001, 0114, 0117, 0139, 0156, 0158, 0161, 0172, 0220, 0263, 0310, .
865	843768	Cover-Air Guide (Black)						
865A	841319	Cover-Air Guide (Aluminum) Used on Type No(s). 0016, 0021, 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 0201, 0225, 0232, 0285, 0286, 0304, 0328, 1154. ----- Note ----- 841231 Cover-Air Guide (Aluminum) Used on Type No(s). 0237, 0285, 3285.						
868	691963	Seal-Valve						
871	692057	Bushing-Valve Guide						
877A	399916	Wire/Connector- Alternator (2 Wires, 7-53/64" Long) (2 Bare Wire Ends, And Insulated Snap Connect Male Pin Terminal)						
877C	399916	Wire/Connector- Alternator (2 Wires, 7-53/64" Long) (2 Bare Wire Ends, And Insulated Snap Connect Male Pin Terminal)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-36 Assemblies include all parts shown in frames. 01/04/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
883	691613	Gasket-Exhaust	947A	692094	Solenoid-Fuel	972B	844726	Tank-Fuel
884	690898	Clamp-Muffler	949	845728	Guard-Debris Screen			Plastic
884A	691956	Clamp-Muffler	953	845030	Screen-Air Cleaner			Used on Type No(s).
892	692318	Switch-Key	955A	807723	Plug-Carburetor			0007, 0008, 0010,
893	820805	Nut (Starter Solenoid)	957	846987	Cap-Fuel Tank (Standard)			0011, 0028, 0044,
893A	691029	Nut (Starter Solenoid)			----- Note -----			0067, 0069, 0224,
893C	845758	Nut (Starter Solenoid)			795027 Cap-Fuel Tank			0229, 0248, 0257,
899	691077	Washer (Starter Solenoid)			Used on Type No(s).			0270, 0287, 0297,
914	807120	Screw (Rocker Cover)	957A	844728	Cap-Fuel Tank (Plastic) (With Tether)			0298, 0299, 0311,
915	691493	Liner-Port	958	692008	Valve-Fuel Shut Off (Plastic)			0312, 0317, 0321,
918	791880	Hose-Vacuum (Cut To Required Length)	964	590799	Cap-Connector			0326, 0346, 0355,
920	691656	Solenoid-Starter	964A	807468	Cap-Carburetor			0361, 0363, 0370,
920A	825418	Solenoid-Starter	967	272490s	Filter-Pre Cleaner			0371, 0372, 0373,
920B	846820	Solenoid-Starter			----- Note -----			0374, 0377, 0381,
		----- Note -----			692520 Filter-Pre Cleaner			0385, 0387, 0389,
		845269 Solenoid -Starter			Used on Type No(s).	972C	845138	Tank-Fuel (Plastic)
		Used on Type No(s).	967C	271794s	Filter-Pre Cleaner			Used on Type No(s).
		0223, 0259, 0262,	968	699959	Cover-Air Cleaner			0018, 0020, 0122,
		0314, 0316, 0317,	968A	844559	Cover-Air Cleaner			0125, 0127, 0128,
		0318, 0361.	968B	841822	Cover-Air Cleaner			0130, 0186, 0210,
920C	845757	Solenoid-Starter	968C	842621	Cover-Air Cleaner			0224, 0226, 0229,
927	691116	Screw (Electronic Governor Module)			Used on Type No(s).			0230, 0233, 0241,
		Used on Type No(s).			0275, 0364.			0244, 0248, 0250,
		0005, 0009, 0115,			----- Note -----			0257, 0279, 0282,
		0116, 0117, 0149,			842620 Cover-Air Cleaner			0287, 0288, 0289,
		0150, 0234, 0300,			Used on Type No(s).			0293, 0298, 0340,
		3005.			0240, 0404.			0354, 0384, 0398,
930	846284	Guard-Rewind Used on Type No(s).	971	807084	Screw (Air Cleaner Base to Carburetor)			1287.
		0001, 0007, 0011,			(M6x14mm)	972D	844558	Tank-Fuel
		0019, 0023, 0026,			Tank-Fuel (Plastic)			Plastic
		0034, 0036, 00400141,			----- Note -----			----- Note -----
		0158, 0178, 0235,			844561 Tank-Fuel			Plastic
		0250, 0270, 0271,			Used on Type No(s).			Used on Type No(s).
		0283, 0309, 0315,			0147, 0405.			
		0319, 0355, 1283.						
		----- Note -----						
934	691058	846284 Guard-Rewind Screw (Fan Retainer)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-37 Assemblies include all parts shown in frames. 01/04/2016

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
988	692063	Gasket-Oil Adapter	1028A	808033	Adapter-Oil Filter	1048	690669	Module-Electronic Governor
988A	690687	Gasket-Oil Adapter			Used on Type No(s).	1048A	845556	Module-Electronic Governor
990	691959	Key Set			0004, 0006, 0009,			
994	794945	Arrestor-Spark			0010, 0031, 0032,			
994A	808361	Arrestor-Spark			0033, 0034, 0036,			
996A	691577	Shield-Carburetor			0066, 0115, 0116,	1051	691124	Ring-Retaining
996B	844930	Shield-Carburetor			0135, 0141, 0142,	1054	280275	Tie-Cable
1004	842258	Duct-Air			0145, 0149, 0150,	1059	698516	Kit-Screw/Washer
1004A	841656	Duct-Air			0152, 0173, 0174,	1068	845143	Clamp-Hose
1005	841439	Fan-Flywheel			0175, 0181, 0191,	1090	691293	Retainer-Brush
1006	690452	Retainer-Fan			0194, 0202, 0205,	1090A	496813	Retainer-Brush
1009	806474	Screw (Starter Motor) (M8x98mm)			0206, 0208, 0214,	1091	691516	Cap-Limiter
					0217, 0219, 0234,	1091A	844448	Cap-Limiter
1009A	691902	Screw (Starter Motor) (M8x20mm SEMS)			0241, 0261, 0266,	1095B	841191	Gasket Set-Valve
					0300, 0308, 0315,	1100	791959	Pivot-Rocker Arm
1012	690592	Retainer-Link			0319, 0320, 0337,	1119	691552	Screw (Alternator) (M4x30mm)
1017	690900	Screen-Oil Pump			0339, 0340, 0351,			----- Note -----
1022	806039s	Gasket-Rocker Cover			0352, 0356, 0377,			841835 Screw (M4x28mm) (Alternator)
1023B	691494	Cover-Rocker			0381, 0386, 0389,			Used on Type No(s).
1023C	690910	Cover-Rocker (Cylinder 1) (With Fuel Pump)			0394, 0395, 0397,			0066.
			1029	807323	Arm-Rocker			807117 Screw (M4x34mm) (Alternator)
1023D	691558	Cover-Rocker	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)			Used on Type No(s).
1023E	691531	Cover-Rocker						0116, 0166, 0167.
1023F	843749	Cover-Rocker						
1023G	842823	Cover-Rocker						
1023H	843750	Cover-Rocker						
1024	843825	Pump-Oil (Used After Code Date 07101400).	1038	691567	Rod-Fuel Shut Off (No Longer Available)	1133	690342	Screw (Crankshaft)
		----- Note -----	1038	844555	Rod-Fuel Shut Off	1155	806647	Washer (Oil Cooler)
		Pump-Oil (Oil Pump Is No Longer Available)(See Reference 18 For Correct Replacement Crankcase Cover). (Used Before Code Date 07101500).	1044	692056	Screw (Flywheel) (M8x14mm)	1176	842067	Nut (Exhaust Manifold)
1025	690689	Spool-Governor	1046	692082	Plug-Blower Housing	1177	845823	Nut (Muffler) (M8)
1026	691836	Rod-Push (Steel)	1046A	843068	Plug-Blower Housing	1254	807084	Screw (Rocker Cover Stud)
		----- Note -----	1047	841580	Shaft-Stub	1301	845823	Nut (Wire Harness) (#8-32)
		691758 Rod-Push (Exhaust)(Aluminum)	1047A	844148	Shaft-Stub Used on Type No(s).	1328	809907	Cap-A/C Rain (Use with 5" A/C) Used on Type No(s).
1027	842921	Filter-Oil (2 1/4" Long)			0016, 0114, 0115, 0116, 0148, 0154, 0156, 0172, 0174, 0175, 0179, 0199, 0220, 0230, 0236, 0281, 0286, 0304, 0308, 0309, 0312, 0328, 0338, 0386, 0387, 0402, 0406, 1154, 1308, 1338, 2308.			----- Note -----
1028	808235	Adapter-Oil Filter						716244 Cap-A/C Rain (Use with 4" A/C) Used on Type No(s).
		----- Note -----						0240, 0404.
		843898 Adapter-Oil Filter Used on Type No(s).			----- Note -----			
		0001, 0021, 0043, 0088, 0375.			844149 Shaft-Stub Used on Type No(s).	1330	272144	Repair Manual
					0002, 0042, 0114, 0239, 1239.	1335	691029	Nut (Blower Housing)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1344	841129	Cable-Choke	1442	844797	Solenoid-Idle Down Used on Type No(s). 0006, 0031, 0032, 0068, 0097, 0261, 0339, 0348, 1339.	1460	845822	Bracket-Governor Control Used on Type No(s). 0010, 0036, 0395.
1346	492031	Valve-Oil Drain Shut Off				1462	792629	Screw (ECU) Used on Type No(s). 0010, 0036, 0395.
1351	690682	Stud (Cylinder Shield)	1455	845813	Lever-Actuator Used on Type No(s). 0010, 0036, 0395.	1463	845825	Kit-Electronic Governor Conversion Used on Type No(s). 0005, 0009, 0010, 0115, 0149, 0150, 0234, 0300, 0395, 3005.
1392	690939	Nut (Rewind Guard) (M6)	1456	845815	Bracket-Stepper Motor Used on Type No(s). 0010, 0036, 0395.	1500	845824	Eng Control Unit (ECU) Used on Type No(s). 0010, 0036, 0395.
1406	842623	Valve-Debris	1457	845819	Stepper Motor Used on Type No(s). 0010, 0036, 0395.	1500A	846622	Module-Electronic Control
1425	844712	Hose-Purge Line (Cut To Required Length)	1458	845812	Screw (Stepper Motor) Used on Type No(s). 0010, 0036, 0395.			
1425A	845717	Hose-Purge Line (Cut To Required Length) Used on Type No(s). 0023, 0026, 0307, 0360, 3077, 3079, 3087, 3285.	1459	845820	Screw-Set Used on Type No(s). 0010, 0036, 0395.			
1431	844035	Washer (Hose-Purge Line)						

Not for
Reproduction

Not for
Reproduction

