

4 in 1 Air Compressor

Operating Instructions and Parts Manual



Model W-1704



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or property damage

WARNING

- Study, understand and follow all instructions before operating this device.
- When using this air compressor, basic safety precautions should always be followed to reduce risk of fire or electrical shock.
- Do not exceed rated pressure of the item being inflated.
- Do not leave device operating and unattended.
- If DC plug fuse is blown, only replace with fuse of identical rating.
- This device contains a DC motor and components which may arc during normal operation. This arcing may ignite flammable gases. Do not operate in a flammable environment.
- · Keep out of reach of children.
- The power cord on this product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling (California law requires this warning to be given to customers in the State of California).
- Do not alter this product.
- Failure to heed these markings may result in personal injury and/or property damage.

SAFETY AND GENERAL INFORMATION

Save these instructions for future use. Study, understand and follow all instructions before operating this device. The owner and operator of this device shall have an understanding of the product and safe operating procedures before attempting to use. If any doubt exists as to the safe and proper use of this product, remove from service immediately. Instructions and safety materials shall be conveyed in the operator's native language before use of this product is authorized.

Inspect before each use. Do not use if bent, broken, melted, burned or otherwise damaged components are noted. A compressor that is damaged in any way or operates abnormally shall be removed from service immediately. This unit is designed for intermittent use only. Operation beyond it's designed duty cycle may result in compressor and/or vehicle damage. NEVER exceed rated pressure of the item being inflated. If rated pressure is exceeded, the item being inflated may burst.

PRODUCT DESCRIPTION

The Pro-Lift 4 in 1 Air Compressor is designed to inflate automotive and light truck tires to manufacturer's recommended pressure. It can also be used to inflate low pressure inflatables such as rafts, cushions and sports balls. It has a built-in light and a mechanical pressure gauge with auto shut-off function. Refer to the vehicle's owners manual or inflatable product owner's manual before using the compressor.



Figures 1 & 2 - W-1704 Nomenclature





Figure 3

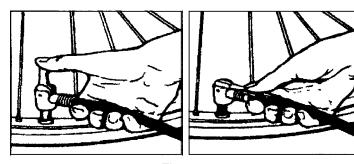


Figure 4

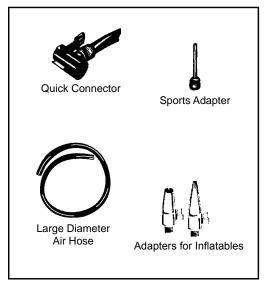


Figure 5

OPERATION

A. High Pressure Inflatables (Tires)

- 1. Remove air hose with Quick Connect from storage compartment and, with thumb latch Quick Connector open, place securely onto tire valve stem (Fig. 4).
- 2. Use thumb to close Quick Connector, ensuring that the thumb latch is as far down as possible.

- Set the Pressure Gauge to the desired value by rotating the dial until the needle aligns with the appropriate pressure.
- Remove Power Cord from storage compartment and insert into a suitable outlet or 12V DC source. Toggle COMPRESSOR/INFLATOR switch to INFLATOR position. Unit will begin inflating.
- 5. Compressor will inflate tire (or other high pressure inflatable) to the preset pressure, then automatically shut off.
- Toggle COMPRESSOR/INFLATOR switch to OFF (center), disconnect Quick Connector and unplug the power cord. Replace air hose with Quick Connect and Power Cord in their respective storage compartment.
- Use a tire gauge to check inflation and adjust to desired pressure as recommended by the vehicle and/or tire manufacturer.







NOTICE: If tire is at higher pressure than value set on gauge, compressor will not start.

NOTICE: Do not rotate gauge dial during inflation.

NOTICE: Always double check air pressure using a reliable pressure gauge.

B. Low Pressure Inflatables

NOTICE: The automatic shut-off feature does not function on low pressure inflatables.

- To inflate air mattresses, beach balls, life jackets, and other low pressure inflatables, remove Large Diameter Air Hose and air hose inflator adapters (below) from storage compartment.
- Insert one end of Large Diameter Air Hose onto Low Pressure Inflator Outlet and appropriate plastic air hose inflator adapter onto other end.
- Plug Power Cord into a DC 12V outlet. Toggle COM-PRESSOR/INFLATOR switch to INFLATOR position. Unit will begin inflating.
- Inflate to a pressure or level of firmness recommended by the manufacturer. Toggle COMPRESSOR/INFLA-TOR switch to OFF (center) and check pressure as required.
- 5. Disconnect plastic hose adapter from inflatable, disassemble adapter from air hose and store properly.



C. Operating the Work Light

- 1. Plug the Compressor into a suitable 12V DC power source.
- Toggle Light switch to LIGHT position for steady, highintensity, work light. Toggle switch to FLASH position for emergency flashing light. Centered switch position extinguishes light.

E. REPLACING THE FUSE

(15A 5.2mm dia. x 20mm glass tube current fuse)

- 1. Unscrew the plastic 12V DC plug cap.
- 2. Gently remove 15A fuse and replace with fuse of same rating and size.
- 3. Place fuse properly in position to allow installation of plastic cap.
- 4. Reinstall plastic 12V DC plug cap.



TIPS FOR OPERATION

- 1. Ensure vehicle battery is sufficiently charged to operate compressor.
- 2. If Compressor does not operate when plugged into a DC 12V outlet, check connections at back of DC 12V plug as well the receptacle fuse. Replace as needed with a fuse of identical rating. Never replace with fuse of higher rating. No user replaceable parts exist for this item, refer any repairs to qualified personnel only.
- Do not overheat the Compressor, monitor cycle times (Compressor on and off periods). Never exceed 15 minutes continuous running. Let unit cool for 30 minutes, then reattempt use.
- 4. Operate and store in a clean, dry environment. Do not obstruct the unit's cooling vents.

Performance Tip: Keep your tires inflated per the vehicle's owner's manual. This will increase gas mileage and reduce tire wear.

SPECIFICATIONS

Model: W-1704
Power Requirement: 12V DC
Maximum PSI: 100 psi

Duty Cycle: 15 min. on/30 min. off Power: 105W @ 12V DC Maximum Air Flow: 0.7 CFM (high pressure)

1.4 CFM (low pressure)

90 DAYS LIMITED WARRANTY

For a period of ninety (90) days from date of purchase, **SFA Companies, Inc.** will repair or replace, at its option, without charge, any of its products which fails due to a defect in material or workmanship, or which fails to conform to any implied warranty not excluded hereby.

Performance of any obligation under this warranty may be obtained by returning the warranted product, freight prepaid, to **SFA Companines, Inc.** Warranty Service Department, 10939 N. Pomona Ave., Kansas City, MO 64153.

Except where such limitations and exclusions are specifically prohibited by applicable law, (1) the CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE, and (2) **SFA Companies, Inc.** SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER, and (3) THE DURATION OF ANY AND ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO A PERIOD OF NINETY (90) DAYS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



SFA Companies, Inc. 10939 N. Pomona Ave. Kansas City, MO 64153 Phone (816)891-6390, Fax (816)891-6599